

Product Update Notification

Brother III OEM Chip Reset

Date: **April, 2018**

1. Unismart 3 Device

Type	Before	After	Upgrade Details
APP	V10.0	V11.0	Solve the problem that the system stops running by continuously clicking the refresh button.
DBBASE	1.49	1.50	Solve self-destruction protection system abnormal startup and upgrade BROTHER III OEM chip reset function.
Price List	/	/	After product upgrade, each client's price list version will be increased by 0.001.
BOOT	1.2	1.2	Fix the bug of the BOOT program.

- Delete the automatic recognition of chip model for RST-BROTHER3 and RST-BROTHER3-N.
- Add the function of model-selecting function to reset chip (check the product list below for more details).
- OEM data can be rewritten as non-OEM data without changing the color, volume, and region.
- Solve the problem that the newly produced LC3117 series chips cannot be reset.

Note:



BOOT upgrade code: When the Unismart 3 device is in the main interface, you can press "SCAN" to upgrade without connecting any JIGs.



2. Uni-JIG Update





JIG Code	Item	Before	After	Reason
BR3	Software Version	≤V1.2	V1.3	Model-selecting function

If you have any questions, please consult your sales manager.

Appendix 1 Uni Brother III Product List 20180403

BR3 (Standard Cartridge with OEM data)	 	Brother	LC3029BK	LC3029BK	Brother MFC-J5830DW/J5830DW XL/J6535DW/J6535DW XL/J5930DW/J6935DW (US)
			LC3029C	LC3029C	
			LC3029M	LC3029M	
			LC3029Y	LC3029Y	Brother MFC-J5330DW/J6530DW/J6930DW/J6730DW (US)
			LC3017BK	LC3017BK	
			LC3017C	LC3017C	
			LC3017M	LC3017M	
			LC3017Y	LC3017Y	
			LC3019BK	LC3019BK	
			LC3019C	LC3019C	
			LC3019M	LC3019M	Brother MFC-J5330DW/J5335DW/J5730DW/J5930DW/J6530DW/J6930DW/J6935DW (EUR)
			LC3019Y	LC3019Y	
			LC3217BK	LC3217BK	
			LC3217C	LC3217C	
			LC3217M	LC3217M	
			LC3217Y	LC3217Y	
			LC3219BK	LC3219BK	
			LC3219C	LC3219C	Brother MFC-J5330DW/J5730DW/J6530DW/J6930DW/J6730DW (AU)
			LC3219M	LC3219M	
			LC3219Y	LC3219Y	
			LC3317BK	LC3317BK	
			LC3317C	LC3317C	
			LC3317M	LC3317M	
			LC3317Y	LC3317Y	
			LC3319BK	LC3319BK	Brother MFC-J5930DW/J6935DW (AU)
			LC3319C	LC3319C	
			LC3319M	LC3319M	
			LC3319Y	LC3319Y	
			LC3329BK	LC3329BK	
			LC3329C	LC3329C	
			LC3329M	LC3329M	
			LC3329Y	LC3329Y	
			LC3129BK	LC3129BK	
			LC3129C	LC3129C	Brother MFC-J6980CDW/J6580CDW (JPN)
			LC3129M	LC3129M	
			LC3129Y	LC3129Y	
			LC3117BK	LC3117BK	
			LC3117C	LC3117C	
			LC3117M	LC3117M	
			LC3117Y	LC3117Y	
			LC3119BK	LC3119BK	Brother MFC-J2330DW/J2730DW/J3530DW/3930DW (AP)
			LC3119C	LC3119C	
			LC3119M	LC3119M	
			LC3119Y	LC3119Y	
			LC3617BK	LC3617BK	
			LC3617C	LC3617C	
			LC3617M	LC3617M	
			LC3617Y	LC3617Y	Brother MFC-J2330DW Brother MFC-J3930DW (ME)
LC3619BK	LC3619BK				
LC3619C	LC3619C				
LC3619M	LC3619M				
LC3619Y	LC3619Y				
LC3719BK	LC3719BK				
LC3719C	LC3719C	Brother MFC-J890DW/J895DW Brother DCP-J772DW/J774DW (EUR)			
LC3719M	LC3719M				
LC3719Y	LC3719Y				
LC3213BK	LC3213BK				
LC3213C	LC3213C				
LC3213M	LC3213M				
LC3213Y	LC3213Y				

BR3 (Standard Cartridge with non-OEM data)	 	Brother	LC3029BK-N	LC3029BK	Brother MFC-J5830DW/J5830DW XL/J6535DW/J6535DW XL/J5930DW/J6935DW (US)	
			LC3029C-N	LC3029C		
			LC3029M-N	LC3029M		
			LC3029Y-N	LC3029Y	Brother MFC-J5330DW/J6530DW/J6930DW/J6730DW (US)	
			LC3017BK-N	LC3017BK		
			LC3017C-N	LC3017C		
			LC3017M-N	LC3017M		
			LC3017Y-N	LC3017Y		
			LC3019BK-N	LC3019BK		
			LC3019C-N	LC3019C		
			LC3019M-N	LC3019M		
			LC3019Y-N	LC3019Y		
			LC3217BK-N	LC3217BK	Brother MFC-J5330DW/J5335DW/J5730DW/J5930DW/J6530DW/J6930DW/J6935DW (EUR)	
			LC3217C-N	LC3217C		
			LC3217M-N	LC3217M		
			LC3217Y-N	LC3217Y		
			LC3219BK-N	LC3219BK		
			LC3219C-N	LC3219C		
			LC3219M-N	LC3219M		
			LC3219Y-N	LC3219Y		
			LC3317BK-N	LC3317BK		Brother MFC-J5330DW/J5730DW/J6530DW/J6930DW/J6730DW (AU)
			LC3317C-N	LC3317C		
			LC3317M-N	LC3317M		
			LC3317Y-N	LC3317Y		
			LC3319BK-N	LC3319BK		
			LC3319C-N	LC3319C		
			LC3319M-N	LC3319M		
			LC3319Y-N	LC3319Y		
			LC3329BK-N	LC3329BK	Brother MFC-J5930DW/J6935DW (AU)	
			LC3329C-N	LC3329C		
			LC3329M-N	LC3329M		
			LC3329Y-N	LC3329Y	Brother MFC-J6995CDW (JPN)	
			LC3129BK-N	LC3129BK		
			LC3129C-N	LC3129C		
			LC3129M-N	LC3129M		
			LC3129Y-N	LC3129Y		
			LC3117BK-N	LC3117BK		Brother MFC-J6980CDW/J6580CDW (JPN)
			LC3117C-N	LC3117C		
			LC3117M-N	LC3117M		
			LC3117Y-N	LC3117Y		
			LC3119BK-N	LC3119BK		
			LC3119C-N	LC3119C		
			LC3119M-N	LC3119M		
			LC3119Y-N	LC3119Y		
			LC3617BK-N	LC3617BK	Brother MFC-J2330DW/J2730DW/J3530DW/3930DW (AP)	
LC3617C-N	LC3617C					
LC3617M-N	LC3617M					
LC3617Y-N	LC3617Y					
LC3619BK-N	LC3619BK					
LC3619C-N	LC3619C					
LC3619M-N	LC3619M					
LC3619Y-N	LC3619Y					
LC3719BK-N	LC3719BK	Brother MFC-J2330DW Brother MFC-J3930DW (ME)				
LC3719C-N	LC3719C					
LC3719M-N	LC3719M					
LC3719Y-N	LC3719Y	Brother MFC-J890DW/J895DW Brother DCP-J772DW/J774DW (EUR)				
LC3213BK-N	LC3213BK					
LC3213C-N	LC3213C					
LC3213M-N	LC3213M					
LC3213Y-N	LC3213Y					

BR3 (Starter Cartridge with OEM data)  	Brother	LC3029BK-S	LC3029BK	Brother MFC-J5830DW/J5830DW XL/J6535DW/J6535DW XL/J5930DW/J6935DW (US)
		LC3029C-S	LC3029C	
		LC3029M-S	LC3029M	
		LC3029Y-S	LC3029Y	
		LC3017BK-S	LC3017BK	Brother MFC-J5330DW/J6530DW/J6930DW/J6730DW (US)
		LC3017C-S	LC3017C	
		LC3017M-S	LC3017M	
		LC3017Y-S	LC3017Y	
		LC3217BK-S	LC3217BK	Brother MFC-J5330DW/J5335DW/J5730DW/J5930DW/J6530DW/J6930DW/J6935DW (EUR)
		LC3217C-S	LC3217C	
		LC3217M-S	LC3217M	
		LC3217Y-S	LC3217Y	
		LC3219BK-S	LC3219BK	
		LC3219C-S	LC3219C	
		LC3219M-S	LC3219M	
		LC3219Y-S	LC3219Y	
		LC3129BK-S	LC3129BK	Brother MFC-J6995CDW (JPN)
		LC3129C-S	LC3129C	
		LC3129M-S	LC3129M	
		LC3129Y-S	LC3129Y	Brother MFC-J6980CDW/J6580CDW (JPN)
LC3117BK-S	LC3117BK			
LC3117C-S	LC3117C			
LC3117M-S	LC3117M			
LC3117Y-S	LC3117Y			
BR3 (Starter Cartridge with non-OEM data)  	Brother	LC3029BK-N-S	LC3029BK	Brother MFC-J5830DW/J5830DW XL/J6535DW/J6535DW XL/J5930DW/J6935DW (US)
		LC3029C-N-S	LC3029C	
		LC3029M-N-S	LC3029M	
		LC3029Y-N-S	LC3029Y	
		LC3017BK-N-S	LC3017BK	Brother MFC-J5330DW/J6530DW/J6930DW/J6730DW (US)
		LC3017C-N-S	LC3017C	
		LC3017M-N-S	LC3017M	
		LC3017Y-N-S	LC3017Y	
		LC3217BK-N-S	LC3217BK	Brother MFC-J5330DW/J5335DW/J5730DW/J5930DW/J6530DW/J6930DW/J6935DW (EUR)
		LC3217C-N-S	LC3217C	
		LC3217M-N-S	LC3217M	
		LC3217Y-N-S	LC3217Y	
		LC3219BK-N-S	LC3219BK	
		LC3219C-N-S	LC3219C	
		LC3219M-N-S	LC3219M	
		LC3219Y-N-S	LC3219Y	
		LC3129BK-N-S	LC3129BK	Brother MFC-J6995CDW (JPN)
		LC3129C-N-S	LC3129C	
		LC3129M-N-S	LC3129M	
		LC3129Y-N-S	LC3129Y	Brother MFC-J6980CDW/J6580CDW (JPN)
LC3117BK-N-S	LC3117BK			
LC3117C-N-S	LC3117C			
LC3117M-N-S	LC3117M			
LC3117Y-N-S	LC3117Y			

"Apex" herein refers to Apex Microelectronics Co., Ltd. The information contained herein is subject to change without prior notification. Apex shall not be liable for technical or editorial errors or omissions contained herein. Photographed products may not always match the description.