



Product Update Notification

Unismart 3 DBBASE V1.91

Date: June, 2020

1. Unismart 3 Device

Item	Before	After
APP	<V21.0	V21.0
DBBASE	<V1.91	V1.91
DELL	V0.04	V0.06
EPSON	V0.07	V0.08
LEXMARK	V0.03	V0.05
NEC	V0.03	V0.04
XEROX	V0.04	V0.08
SN-XEROX-7100	V0.04	V0.08

2. Uni-3 New JIG (N/A)

3. Uni-3 New Added Chip List(N/A)

4. Uni-3 New Added Model List

Brand	JIG	Unismart Code	OEM Code	For Use with Printers
XEROX	Q3	ALX-1514	106R01514	Xerox Phaser 6700N/DN
XEROX	Q3	ALX-1511	106R01511	
XEROX	Q3	ALX-1512	106R01512	
XEROX	Q3	ALX-1513	106R01513	
XEROX	Q3	ALX-1514-N	106R01514-N	
XEROX	Q3	ALX-1511-N	106R01511-N	
XEROX	Q3	ALX-1512-N	106R01512-N	
XEROX	Q3	ALX-1513-N	106R01513-N	
XEROX	Q3	ALX-1518K	106R01518	Fujixerox Phaser-6700
XEROX	Q3	ALX-1515C	106R01515	
XEROX	Q3	ALX-1516M	106R01516	
XEROX	Q3	ALX-1517Y	106R01517	
XEROX	Q3	ALX-2609	106R02609	Xerox Phaser 7100N/DN



 
XEROX	Q3	ALX-2610	106R02610
XEROX	Q3	ALX-2611	106R02611

5. Xerox 100 Model Reset List (refer to the attachment)

“Apex” herein refers to Apex Microelectronics Co., Ltd. The information contained herein is subject to change without prior notification. Apex shall not be liable for technical or editorial errors or omissions contained herein. Photographed products may not always match the description.




NO	Brand	PCB Code	Unismart Product Code	For Use with	OEM Product Code	Printer	JIG	Color	Yield	Region	Teset Result
1	DELL	PCB-Q3	ALD-5850	Dell 5130	330-5850	Laserjet	Q3	C	12K	WW	Can be reset
2	DELL	PCB-Q3	ALD-5843		330-5843	Laserjet	Q3	M	12K	WW	Can be reset
3	DELL	PCB-Q3	ALD-5852		330-5852	Laserjet	Q3	Y	12K	WW	Can be reset
4	DELL	PCB-Q3	ALD-5851		330-5851	Laserjet	Q3	BK	9K	US	Can be reset
5	DELL	PCB-Q3	ALD-5848		330-5848	Laserjet	Q3	C	6K	US	Can be reset
6	DELL	PCB-Q3	ALD-5845		330-5845	Laserjet	Q3	M	6K	US	Can be reset
7	DELL	PCB-Q3	ALD-5839		330-5839	Laserjet	Q3	Y	6K	US	Can be reset
8	DELL	PCB-Q3	ALD-5846		330-5846	Laserjet	Q3	BK	18K	WW	Can be reset
9	DELL	PCB-Q3	ALD-5849DR		330-5849/Drum	Laserjet	Q3	BK	50K	WW	Can be reset
10	DELL	PCB-Q3	ALD-5847DR		330-5847/Drum	Laserjet	Q3	C	50K	WW	Can be reset
11	DELL	PCB-Q3	ALD-5855DR		330-5855/Drum	Laserjet	Q3	M	50K	WW	Can be reset
12	DELL	PCB-Q3	ALD-5853DR		330-5853/Drum	Laserjet	Q3	Y	50K	WW	Can be reset
13	DELL	PCB-Q4	ALD-6135	Dell 7130	330-6135	Laserjet	Q3	BK	19K	WW	Stop reset
14	DELL	PCB-Q4	ALD-6142		330-6142	Laserjet	Q3	C	11K	WW	Stop reset
15	DELL	PCB-Q4	ALD-6143		330-6143	Laserjet	Q3	M	11K	WW	Stop reset
16	DELL	PCB-Q4	ALD-6144		330-6144	Laserjet	Q3	Y	11K	WW	Stop reset
17	DELL	PCB-Q4	ALD-6138		330-6138	Laserjet	Q3	C	20K	WW	Stop reset
18	DELL	PCB-Q4	ALD-6141		330-6141	Laserjet	Q3	M	20K	WW	Stop reset
19	DELL	PCB-Q4	ALD-6139		330-6139	Laserjet	Q3	Y	20K	WW	Stop reset
20	DELL	PCB-Q4	ALD-6135-N		330-6135-N	Laserjet	Q3	BK	19K	WW	Stop reset
21	DELL	PCB-Q4	ALD-6142-N		330-6142-N	Laserjet	Q3	C	11K	WW	Stop reset
22	DELL	PCB-Q4	ALD-6143-N		330-6143-N	Laserjet	Q3	M	11K	WW	Stop reset
23	DELL	PCB-Q4	ALD-6144-N		330-6144-N	Laserjet	Q3	Y	11K	WW	Stop reset
24	DELL	PCB-Q4	ALD-6138-N		330-6138-N	Laserjet	Q3	C	20K	WW	Stop reset
25	DELL	PCB-Q4	ALD-6141-N		330-6141-N	Laserjet	Q3	M	20K	WW	Stop reset
26	DELL	PCB-Q4	ALD-6139-N		330-6139-N	Laserjet	Q3	Y	20K	WW	Stop reset
27	DELL	PCB-Q4	ALD-10873K-N	Dell C5130cdn	593-10873-N	Laserjet	Q3	BK	19K	WW	Can be reset
28	DELL	PCB-Q4	ALD-10876C-N		593-10876-N	Laserjet	Q3	C	20K	WW	Can be reset
29	DELL	PCB-Q4	ALD-10875M-N		593-10875-N	Laserjet	Q3	M	20K	WW	Can be reset
30	DELL	PCB-Q4	ALD-10878Y-N		593-10878-N	Laserjet	Q3	Y	20K	WW	Can be reset

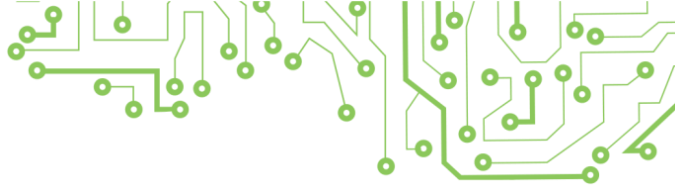


31	DELL	PCB-Q4	ALD-2115	Dell C5765dn	332-2115/593-BBCR	Laserjet	Q3	BK	18K	WW	Stop reset
32	DELL	PCB-Q4	ALD-2118		332-2118/593-BBCS	Laserjet	Q3	C	12K	WW	Stop reset
33	DELL	PCB-Q4	ALD-2116		332-2116/593-BBCL	Laserjet	Q3	Y	12K	WW	Stop reset
34	DELL	PCB-Q4	ALD-2117		332-2117/593-BBCX	Laserjet	Q3	M	12K	WW	Stop reset
35	DELL	PCB-Q4	ALD-10873K	Dell C7130cdn	593-10873	Laserjet	Q3	BK	19K	WW	Can be reset
36	DELL	PCB-Q4	ALD-10876C		593-10876	Laserjet	Q3	C	20K	WW	Can be reset
37	DELL	PCB-Q4	ALD-10875M		593-10875	Laserjet	Q3	M	20K	WW	Can be reset
38	DELL	PCB-Q4	ALD-10878Y		593-10878	Laserjet	Q3	Y	20K	WW	Can be reset
39	EPSON	PCB-Q3	ALE-0605K	Epson Aculaser-C9300	C13S050605	Laserjet	Q3	BK	6.5K	WW	Can be reset
40	EPSON	PCB-Q3	ALE-0604C		C13S050604	Laserjet	Q3	C	7.5K	WW	Can be reset
41	EPSON	PCB-Q3	ALE-0603M		C13S050603	Laserjet	Q3	M	7.5K	WW	Can be reset
42	EPSON	PCB-Q3	ALE-0602Y		C13S050602	Laserjet	Q3	Y	7.5K	WW	Can be reset
43	EPSON	PCB-Q3	ALE-3T31K	Epson LP-M8040/ LP-M8040A/ LP-M8040F/LP-M8040PS/LP-S8160/LP-S8160S	LPC3T31K	Laserjet	Q3	BK	4.9K	JP	Can be reset
44	EPSON	PCB-Q3	ALE-3T31C		LPC3T31C	Laserjet	Q3	C	6.5K	JP	Can be reset
45	EPSON	PCB-Q3	ALE-3T31M		LPC3T31M	Laserjet	Q3	M	6.5K	JP	Can be reset
46	EPSON	PCB-Q3	ALE-3T31Y		LPC3T31Y	Laserjet	Q3	Y	6.5K	JP	Can be reset
47	EPSON	PCB-Q3	ALE-3T35K	Epson LP-S6160	LPC3T35K	Laserjet	Q3	BK	4.1K	JP	Can be reset
48	EPSON	PCB-Q3	ALE-3T35C		LPC3T35C	Laserjet	Q3	C	3.7K	JP	Can be reset
49	EPSON	PCB-Q3	ALE-3T35M		LPC3T35M	Laserjet	Q3	M	3.7K	JP	Can be reset
50	EPSON	PCB-Q3	ALE-3T35Y		LPC3T35Y	Laserjet	Q3	Y	3.7K	JP	Can be reset
51	EPSON	PCB-Q3	ALE-3T33K	Epson LP-S7160	LPC3T33K	Laserjet	Q3	BK	4.7K	JP	Can be reset
52	EPSON	PCB-Q3	ALE-3T33C		LPC3T33C	Laserjet	Q3	C	5.3K	JP	Can be reset
53	EPSON	PCB-Q3	ALE-3T33M		LPC3T33M	Laserjet	Q3	M	5.3K	JP	Can be reset
54	EPSON	PCB-Q3	ALE-3T33Y		LPC3T33Y	Laserjet	Q3	Y	5.3K	JP	Can be reset
55	EPSON	PCB-Q3	ALE-3T17K	Epson Offirio LP-S7100/8100	LPC3T17K	Laserjet	Q3	BK	2.2K	JP	Can be reset
56	EPSON	PCB-Q3	ALE-3T17C		LPC3T17C	Laserjet	Q3	C	2K	JP	Can be reset
57	EPSON	PCB-Q3	ALE-3T17M		LPC3T17M	Laserjet	Q3	M	2K	JP	Can be reset
58	EPSON	PCB-Q3	ALE-3T17Y		LPC3T17Y	Laserjet	Q3	Y	2K	JP	Can be reset
59	EPSON	PCB-Q3	ALE-3T18K		LPC3T18K	Laserjet	Q3	BK	5.5K	JP	Can be reset
60	EPSON	PCB-Q3	ALE-3T18C	LPC3T18C	Laserjet	Q3	C	6.5K	JP	Can be reset	




61	EPSON	PCB-Q3	ALE-3T18M	Epson Offirio LP-S7100/8100	LPC3T18M	Laserjet	Q3	M	6.5K	JP	Can be reset
62	EPSON	PCB-Q3	ALE-3T18Y		LPC3T18Y	Laserjet	Q3	Y	6.5K	JP	Can be reset
63	EPSON	PCB-Q3	ALE-3K17K-DR		LPC3K17K/Drum	Laserjet	Q3	BK	24K	JP	Can be reset
64	EPSON	PCB-Q3	ALE-3K17CMY-DR		LPC3K17/Drum	Laserjet	Q3	CMY Drum	24K	JP	Can be reset
65	EPSON	PCB-Q3	ALE-0659	Epson WorkForce AL-C500DN	C13S050659	Laserjet	Q3	BK	18.3K	WW	Can be reset
66	EPSON	PCB-Q3	ALE-0658		C13S050658	Laserjet	Q3	C	13.7K	WW	Can be reset
67	EPSON	PCB-Q3	ALE-0657		C13S050657	Laserjet	Q3	M	13.7K	WW	Can be reset
68	EPSON	PCB-Q3	ALE-0656		C13S050656	Laserjet	Q3	Y	13.7K	WW	Can be reset
69	EPSON	PCB-Q4	ALE-3T16KV	Epson LP-S9000	LPC3T16KV	Laserjet	Q3	BK	21K	JP	Stop reset
70	EPSON	PCB-Q4	ALE-3T16CV		LPC3T16CV	Laserjet	Q3	C	16K	JP	Stop reset
71	EPSON	PCB-Q4	ALE-3T16MV		LPC3T16MV	Laserjet	Q3	M	16K	JP	Stop reset
72	EPSON	PCB-Q4	ALE-3T16VY		LPC3T16VY	Laserjet	Q3	Y	16K	JP	Stop reset
73	EPSON	PCB-Q4	ALE-3K15DR	LPC3K15/Drum	Laserjet	Q3	BKCMY Drum	40K	JP	Stop reset	
74	EPSON	PCB-Q4	ALE-3T36K	Epson LP-S9070	LPC3T36K	Laserjet	Q3	BK	22.4K	JP	Stop reset
75	EPSON	PCB-Q4	ALE-3T36C		LPC3T36C	Laserjet	Q3	C	19.1K	JP	Stop reset
76	EPSON	PCB-Q4	ALE-3T36M		LPC3T36M	Laserjet	Q3	M	19.1K	JP	Stop reset
77	EPSON	PCB-Q4	ALE-3T36Y		LPC3T36Y	Laserjet	Q3	Y	19.1K	JP	Stop reset
78	LEXMARK	PCB-Q4	ALL-C950X2KG	Lexmark C950	C950X2KG	Laserjet	Q3	K	32K	WW	Can be reset
79	LEXMARK	PCB-Q4	ALL-C950X2CG		C950X2CG	Laserjet	Q3	C	22K	WW	Can be reset
80	LEXMARK	PCB-Q4	ALL-C950X2MG		C950X2MG	Laserjet	Q3	M	22K	WW	Can be reset
81	LEXMARK	PCB-Q4	ALL-C950X2YG		C950X2YG	Laserjet	Q3	Y	22K	WW	Can be reset
82	LEXMARK	PCB-Q4	ALL-X950X2KG	Lexmark X950	X950X2KG	Laserjet	Q3	K	32K	WW	Stop reset
83	LEXMARK	PCB-Q4	ALL-X950X2CG		X950X2CG	Laserjet	Q3	C	22K	WW	Stop reset
84	LEXMARK	PCB-Q4	ALL-X950X2MG		X950X2MG	Laserjet	Q3	M	22K	WW	Stop reset
85	LEXMARK	PCB-Q4	ALL-X950X2YG		X950X2YG	Laserjet	Q3	Y	22K	WW	Stop reset
86	NEC	PCB-Q3	ALN-9131DR	NEC MultiWriter 9100C	PR-L9100C-31/Drum	Laserjet	Q3	BK	24K	JP	Can be reset
87	NEC	PCB-Q3	ALN-9135DR		PR-L9100C-35/Drum	Laserjet	Q3	CMY Drum	24K	JP	Can be reset
88	NEC	PCB-Q3	ALN-9014K		PR-L9010C-11	Laserjet	Q3	Y	4.5K	JP	Can be reset
89	NEC	PCB-Q3	ALN-9013C		PR-L9010C-12	Laserjet	Q3	M	4.5K	JP	Can be reset
90	NEC	PCB-Q3	ALN-9012M		PR-L9010C-13	Laserjet	Q3	C	4.5K	JP	Can be reset

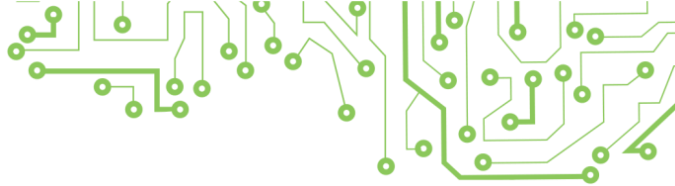 


91	NEC	PCB-Q3	ALN-9011Y	NEC MultiWriter 9100C	PR-L9010C-14	Laserjet	Q3	BK	5K	JP	Can be reset
92	NEC	PCB-Q3	ALN-9100K		PR-L9100C-14	Laserjet	Q3	BK	5K	JP	Can be reset
93	NEC	PCB-Q3	ALN-9100C		PR-L9100C-13	Laserjet	Q3	C	4.5K	JP	Can be reset
94	NEC	PCB-Q3	ALN-9100M		PR-L9100C-12	Laserjet	Q3	M	4.5K	JP	Can be reset
95	NEC	PCB-Q3	ALN-9100Y		PR-L9100C-11	Laserjet	Q3	Y	4.5K	JP	Can be reset
96	NEC	PCB-Q3	ALN-9114K	NEC MultiWriter-9110	PR-L9110C-14	Laserjet	Q3	BK	5K	JP	Can be reset
97	NEC	PCB-Q3	ALN-9113C		PR-L9110C-13	Laserjet	Q3	C	6K	JP	Can be reset
98	NEC	PCB-Q3	ALN-9112M		PR-L9110C-12	Laserjet	Q3	M	6K	JP	Can be reset
99	NEC	PCB-Q3	ALN-9111Y		PR-L9110C-11	Laserjet	Q3	Y	6K	JP	Can be reset
100	NEC	PCB-Q4	ALN-9319K	NEC MultiWriter-9300C/9350C	PR-L9300C-19	Laserjet	Q3	BK	15K	JP	Stop reset
101	NEC	PCB-Q4	ALN-9318C		PR-L9300C-18	Laserjet	Q3	C	12K	JP	Stop reset
102	NEC	PCB-Q4	ALN-9317M		PR-L9300C-17	Laserjet	Q3	M	12K	JP	Stop reset
103	NEC	PCB-Q4	ALN-9316Y		PR-L9300C-16	Laserjet	Q3	Y	12K	JP	Stop reset
104	NEC	PCB-Q4	ALN-9331DR	PR-L9300C-31/Drum	Laserjet	Q3	BKCMY Drum	40K	JP	Stop reset	
105	NEC	PCB-Q4	ALN-9631DR	NEC MultiWriter-9600C	PR-L9600C-31/Drum	Laserjet	Q3	BKCMY Drum	65K	JP	Stop reset
106	NEC	PCB-Q4	ALN-9619K		PR-L9600C-19	Laserjet	Q3	BK	15K	JP	Stop reset
107	NEC	PCB-Q4	ALN-9618C		PR-L9600C-18	Laserjet	Q3	C	11K	JP	Stop reset
108	NEC	PCB-Q4	ALN-9617M		PR-L9600C-17	Laserjet	Q3	M	11K	JP	Stop reset
109	NEC	PCB-Q4	ALN-9616Y		PR-L9600C-16	Laserjet	Q3	Y	11K	JP	Stop reset
110	NEC	PCB-Q4	ALN-9914K	NEC MultiWriter-9950C	PR-L9950C-14	Laserjet	Q3	BK	23K	JP	Stop reset
111	NEC	PCB-Q4	ALN-9913C		PR-L9950C-13	Laserjet	Q3	C	12K	JP	Stop reset
112	NEC	PCB-Q4	ALN-9912M		PR-L9950C-12	Laserjet	Q3	M	12K	JP	Stop reset
113	NEC	PCB-Q4	ALN-9911Y		PR-L9950C-11	Laserjet	Q3	Y	12K	JP	Stop reset
114	NEC	PCB-Q4	ALN-9931DR		PR-L9950C-31/Drum	Laserjet	Q3	BKCMY Drum	70K	JP	Stop reset
115	XEROX	PCB-Q3	ALX-1444K	Fuji Xerox DocuCentre-IV C2260/C2263/C2265	CT201444	Laserjet	Q3	BK	22K	JP	Stop reset
116	XEROX	PCB-Q3	ALX-1445C		CT201445	Laserjet	Q3	C	15K	JP	Stop reset
117	XEROX	PCB-Q3	ALX-1446M		CT201446	Laserjet	Q3	M	15K	JP	Stop reset
118	XEROX	PCB-Q3	ALX-1447Y		CT201447	Laserjet	Q3	Y	15K	JP	Stop reset

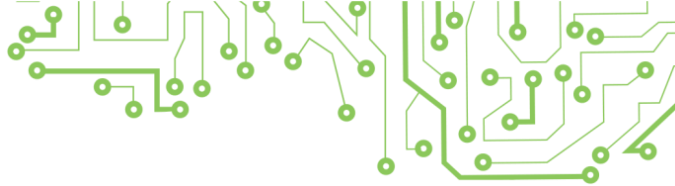 


119	XEROX	PCB-Q3	ALX-1676K	Fuji Xerox DocuCentre-IV C4430	CT201676	Laserjet	Q3	BK	16K	AP(ex. JP)	Can be reset
120	XEROX	PCB-Q3	ALX-1677C		CT201677	Laserjet	Q3	C	12K	AP(ex. JP)	Can be reset
121	XEROX	PCB-Q3	ALX-1678M		CT201678	Laserjet	Q3	M	12K	AP(ex. JP)	Can be reset
122	XEROX	PCB-Q3	ALX-1679Y		CT201679	Laserjet	Q3	Y	12K	AP(ex. JP)	Can be reset
123	XEROX	PCB-Q3	ALX-0895K		CT350895	Laserjet	Q3	BK	48K	AP(ex. JP)	Can be reset
124	XEROX	PCB-Q3	ALX-0896C		CT350896	Laserjet	Q3	C	48K	AP(ex. JP)	Can be reset
125	XEROX	PCB-Q3	ALX-0897M		CT350897	Laserjet	Q3	M	48K	AP(ex. JP)	Can be reset
126	XEROX	PCB-Q3	ALX-0898Y		CT350898	Laserjet	Q3	Y	48K	AP(ex. JP)	Can be reset
127	XEROX	PCB-Q3	ALX-1795K	Fuji Xerox DocuCentre-IV2056/2058	CT201795	Laserjet	Q3	BK	9K	AP(ex. JP)	Stop reset
128	XEROX	PCB-Q3	ALX-0938DR		CT350938	Laserjet	Q3	BK	52K	AP(ex. JP)	Stop reset
129	XEROX	PCB-Q3	ALX-1734K	Fuji Xerox DocuCentre-IV2060/3060/3065	CT201734	Laserjet	Q3	BK	25K	AP(ex. JP)	Stop reset
130	XEROX	PCB-Q3	ALX-0922DR		CT350922	Laserjet	Q3	BK	55K	AP(ex. JP)	Stop reset
131	XEROX	PCB-Q3	ALX-0941DR	Fuji Xerox DocuCentre-IV4070/5070/Apeosprot-IV3070/4070/5070	CT350941/	Laserjet	Q3	BKCMY Drum	80K	AP	Stop reset
					CT350942/Drum						Stop reset
132	XEROX	PCB-Q3	ALX-2451K	Fuji Xerox DocuPrint-C2450	CT202451	Laserjet	Q3	BK	5K	JP	Can be reset
133	XEROX	PCB-Q3	ALX-2452C		CT202452	Laserjet	Q3	C	4.5K	JP	Can be reset
134	XEROX	PCB-Q3	ALX-2453M		CT202453	Laserjet	Q3	M	4.5K	JP	Can be reset
135	XEROX	PCB-Q3	ALX-2454Y		CT202454	Laserjet	Q3	Y	4.5K	JP	Can be reset
136	XEROX	PCB-Q3	ALX-1398K	Fuji Xerox DocuPrint-C3350	CT201398	Laserjet	Q3	BK	5K	JP	Can be reset
137	XEROX	PCB-Q3	ALX-1399C		CT201399	Laserjet	Q3	C	4.5K	JP	Can be reset
138	XEROX	PCB-Q3	ALX-1400M		CT201400	Laserjet	Q3	M	4.5K	JP	Can be reset
139	XEROX	PCB-Q3	ALX-1401Y		CT201401	Laserjet	Q3	Y	4.5K	JP	Can be reset
140	XEROX	PCB-Q3	ALX-0812DR		CT350812/Drum	Laserjet	Q3	BK	24K	JP	Can be reset
141	XEROX	PCB-Q3	ALX-0813DR		CT350813/Drum	Laserjet	Q3	CMY Drum	24K	JP	Can be reset
142	XEROX	PCB-Q3	ALX-1510			106R01510	Laserjet	Q3	BK	18K	EXP
143	XEROX	PCB-Q3	ALX-1507		106R01507	Laserjet	Q3	C	12K	EXP	Can be reset
144	XEROX	PCB-Q3	ALX-1508		106R01508	Laserjet	Q3	M	12K	EXP	Can be reset
145	XEROX	PCB-Q3	ALX-1509	Xerox Phaser 6700N/DN	106R01509	Laserjet	Q3	Y	12K	EXP	Can be reset
146	XEROX	PCB-Q3	ALX-1506		106R01506	Laserjet	Q3	BK	7.1K	EXP	Can be reset
147	XEROX	PCB-Q3	ALX-1503		106R01503	Laserjet	Q3	C	5K	EXP	Can be reset
148	XEROX	PCB-Q3	ALX-1504		106R01504	Laserjet	Q3	M	5K	EXP	Can be reset

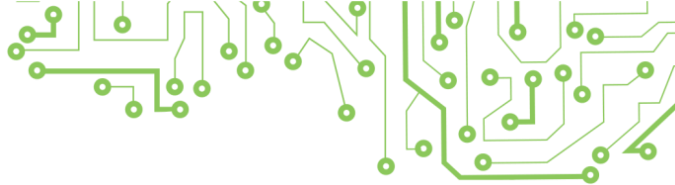 


149	XEROX	PCB-Q3	ALX-1505	Xerox Phaser 6700N/DN	106R01505	Laserjet	Q3	Y	5K	EXP	Can be reset
150	XEROX	PCB-Q3	ALX-1526		106R01526	Laserjet	Q3	BK	18K	ME	Can be reset
151	XEROX	PCB-Q3	ALX-1523		106R01523	Laserjet	Q3	C	12K	ME	Can be reset
152	XEROX	PCB-Q3	ALX-1524		106R01524	Laserjet	Q3	M	12K	ME	Can be reset
153	XEROX	PCB-Q3	ALX-1525		106R01525	Laserjet	Q3	Y	12K	ME	Can be reset
154	XEROX	PCB-Q3	ALX-1510-N		106R01510-N	Laserjet	Q3	BK	18K	EXP	Can be reset
155	XEROX	PCB-Q3	ALX-1507-N		106R01507-N	Laserjet	Q3	C	12K	EXP	Can be reset
156	XEROX	PCB-Q3	ALX-1508-N		106R01508-N	Laserjet	Q3	M	12K	EXP	Can be reset
157	XEROX	PCB-Q3	ALX-1509-N		106R01509-N	Laserjet	Q3	Y	12K	EXP	Can be reset
158	XEROX	PCB-Q3	ALX-1506-N		106R01506-N	Laserjet	Q3	BK	7K	EXP	Can be reset
159	XEROX	PCB-Q3	ALX-1503-N		106R01503-N	Laserjet	Q3	C	5K	EXP	Can be reset
160	XEROX	PCB-Q3	ALX-1504-N		106R01504-N	Laserjet	Q3	M	5K	EXP	Can be reset
161	XEROX	PCB-Q3	ALX-1505-N		106R01505-N	Laserjet	Q3	Y	5K	EXP	Can be reset
162	XEROX	PCB-Q3	ALX-1526-N		106R01526-N	Laserjet	Q3	BK	18K	ME	Can be reset
163	XEROX	PCB-Q3	ALX-1523-N		106R01523-N	Laserjet	Q3	C	12K	ME	Can be reset
164	XEROX	PCB-Q3	ALX-1524-N		106R01524-N	Laserjet	Q3	M	12K	ME	Can be reset
165	XEROX	PCB-Q3	ALX-1525-N		106R01525-N	Laserjet	Q3	Y	12K	ME	Can be reset
166	XEROX	PCB-Q3	ALX-1514		106R01514	Laserjet	Q3	K	7.1K	ME	Can be reset
167	XEROX	PCB-Q3	ALX-1511		106R01511	Laserjet	Q3	C	5K	ME	Can be reset
168	XEROX	PCB-Q3	ALX-1512		106R01512	Laserjet	Q3	M	5K	ME	Can be reset
169	XEROX	PCB-Q3	ALX-1513	106R01513	Laserjet	Q3	Y	5K	ME	Can be reset	
170	XEROX	PCB-Q3	ALX-1514-N	106R01514-N	Laserjet	Q3	K	7.1K	ME	Can be reset	
171	XEROX	PCB-Q3	ALX-1511-N	106R01511-N	Laserjet	Q3	C	5K	ME	Can be reset	
172	XEROX	PCB-Q3	ALX-1512-N	106R01512-N	Laserjet	Q3	M	5K	ME	Can be reset	
173	XEROX	PCB-Q3	ALX-1513-N	106R01513-N	Laserjet	Q3	Y	5K	ME	Can be reset	
174	XEROX	PCB-Q3	ALX-1680K	Fuji Xerox DocuPrint-CM505d	CT201680	Laserjet	Q3	BK	16K	AP	Can be reset
175	XEROX	PCB-Q3	ALX-1681C		CT201681	Laserjet	Q3	C	12K	AP	Can be reset
176	XEROX	PCB-Q3	ALX-1682M		CT201682	Laserjet	Q3	M	12K	AP	Can be reset
177	XEROX	PCB-Q3	ALX-1683Y		CT201683	Laserjet	Q3	Y	12K	AP	Can be reset
178	XEROX	PCB-Q3	ALX-0899DR		CT350899/Drum	Laserjet	Q3	BK	50K	AP	Can be reset

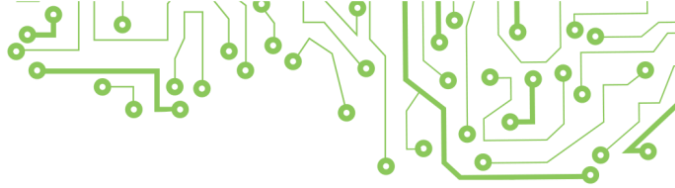 


179	XEROX	PCB-Q3	ALX-0900DR	Fuji Xerox DocuPrint-CM505d	CT350900/Drum	Laserjet	Q3	C	50K	AP	Can be reset
180	XEROX	PCB-Q3	ALX-0901DR		CT350901/Drum	Laserjet	Q3	M	50K	AP	Can be reset
181	XEROX	PCB-Q3	ALX-0902DR		CT350902/Drum	Laserjet	Q3	Y	50K	AP	Can be reset
182	XEROX	PCB-Q3	ALX-0974DR	Fuji Xerox Phaser-6700	108R00974/Drum	Laserjet	Q3	BK	50K	WW	Can be reset
183	XEROX	PCB-Q3	ALX-0971DR		108R00971/Drum	Laserjet	Q3	C	50K	WW	Can be reset
184	XEROX	PCB-Q3	ALX-0972DR		108R00972/Drum	Laserjet	Q3	M	50K	WW	Can be reset
185	XEROX	PCB-Q3	ALX-0973DR		108R00973/Drum	Laserjet	Q3	Y	50K	WW	Can be reset
186	XEROX	PCB-Q3	ALX-2292K	Fuji Xerox Versant 80	CT202292	Laserjet	Q3	BK	/	AP (ex. JP)	Stop reset
187	XEROX	PCB-Q3	ALX-2293C		CT202293	Laserjet	Q3	C	/	AP (ex. JP)	Stop reset
188	XEROX	PCB-Q3	ALX-2294M		CT202294	Laserjet	Q3	M	/	AP (ex. JP)	Stop reset
189	XEROX	PCB-Q3	ALX-2295Y		CT202295	Laserjet	Q3	Y	/	AP (ex. JP)	Stop reset
190	XEROX	PCB-Q3	ALX-0674DR		013R00674/Drum	Laserjet	Q3	BKCMY Drum	348K	WW	Stop reset
191	XEROX	PCB-Q3	ALX-2459K	FujiXerox DocuPrint-C3450d	CT202459	Laserjet	Q3	BK	5K	JP	Can be reset
192	XEROX	PCB-Q3	ALX-2460C		CT202460	Laserjet	Q3	C	6k	JP	Can be reset
193	XEROX	PCB-Q3	ALX-2461M		CT202461	Laserjet	Q3	M	6k	JP	Can be reset
194	XEROX	PCB-Q3	ALX-2462Y		CT202462	Laserjet	Q3	Y	6k	JP	Can be reset
195	XEROX	PCB-Q3	ALX-1518K	Fujixerox Phaser-6700	106R01518	Laserjet	Q3	K	18K	AP	Can be reset
196	XEROX	PCB-Q3	ALX-1515C		106R01515	Laserjet	Q3	C	12K	AP	Can be reset
197	XEROX	PCB-Q3	ALX-1516M		106R01516	Laserjet	Q3	M	12K	AP	Can be reset
198	XEROX	PCB-Q3	ALX-1517Y		106R01517	Laserjet	Q3	Y	12K	AP	Can be reset
199	XEROX	PCB-Q3	ALX-1820	Xerox DocuCentre-IV 4070/5070/ ApeosPort-IV 3070	CT201820	Laserjet	Q3	BK	30K	AP(ex. JP)	Stop reset
200	XEROX	PCB-Q3	ALX-1820-N		CT201820-N	Laserjet	Q3	BK	30K	AP(ex. JP)	Stop reset
201	XEROX	PCB-Q3	ALX-2605	Xerox Phaser 7100N/DN	106R02605	Laserjet	Q3	BK	5K	EXP	Can be reset
202	XEROX	PCB-Q3	ALX-2602		106R02602	Laserjet	Q3	C	4.5K	EXP	Can be reset
203	XEROX	PCB-Q3	ALX-2603		106R02603	Laserjet	Q3	M	4.5K	EXP	Can be reset
204	XEROX	PCB-Q3	ALX-2604		106R02604	Laserjet	Q3	Y	4.5K	EXP	Can be reset
205	XEROX	PCB-Q3	ALX-2599		106R02599	Laserjet	Q3	C	4.5K	EXP	Can be reset
206	XEROX	PCB-Q3	ALX-2600		106R02600	Laserjet	Q3	M	4.5K	EXP	Can be reset
207	XEROX	PCB-Q3	ALX-2601		106R02601	Laserjet	Q3	Y	4.5K	EXP	Can be reset
208	XEROX	PCB-Q3	ALX-2612		106R02612	Laserjet	Q3	BK	5K	ME	Can be reset

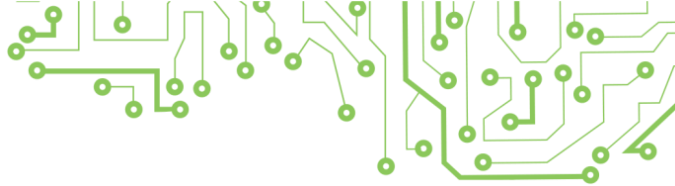 


209	XEROX	PCB-Q3	ALX-2606	Xerox Phaser 7100N/DN	106R02606	Laserjet	Q3	C	4.5K	ME	Can be reset
210	XEROX	PCB-Q3	ALX-2607		106R02607	Laserjet	Q3	M	4.5K	ME	Can be reset
211	XEROX	PCB-Q3	ALX-2608		106R02608	Laserjet	Q3	Y	4.5K	ME	Can be reset
212	XEROX	PCB-Q3	ALX-2605-N		106R02605-N	Laserjet	Q3	BK	5K	EXP	Can be reset
213	XEROX	PCB-Q3	ALX-2599-N		106R02599-N	Laserjet	Q3	C	4.5K	EXP	Can be reset
214	XEROX	PCB-Q3	ALX-2600-N		106R02600-N	Laserjet	Q3	M	4.5K	EXP	Can be reset
215	XEROX	PCB-Q3	ALX-2601-N		106R02601-N	Laserjet	Q3	Y	4.5K	EXP	Can be reset
216	XEROX	PCB-Q3	ALX-2612-N		106R02612-N	Laserjet	Q3	BK	5K	ME	Can be reset
217	XEROX	PCB-Q3	ALX-2609-N		106R02609-N	Laserjet	Q3	C	4.5K	ME	Can be reset
218	XEROX	PCB-Q3	ALX-2610-N		106R02610-N	Laserjet	Q3	M	4.5K	ME	Can be reset
219	XEROX	PCB-Q3	ALX-2611-N		106R02611-N	Laserjet	Q3	Y	4.5K	ME	Can be reset
220	XEROX	PCB-Q3	ALX-2606-N		106R02606-N	Laserjet	Q3	C	4.5K	ME	Can be reset
221	XEROX	PCB-Q3	ALX-2607-N		106R02607-N	Laserjet	Q3	M	4.5K	ME	Can be reset
222	XEROX	PCB-Q3	ALX-2608-N		106R02608-N	Laserjet	Q3	Y	4.5K	ME	Can be reset
223	XEROX	PCB-Q3	ALX-2609		106R02609	Laserjet	Q3	C	4.5K	ME	Can be reset
224	XEROX	PCB-Q3	ALX-2610		106R02610	Laserjet	Q3	M	4.5K	ME	Can be reset
225	XEROX	PCB-Q3	ALX-2611		106R02611	Laserjet	Q3	Y	4.5K	ME	Can be reset
226	XEROX	PCB-Q3	ALX-2225K	Xerox Versant 2100	CT202225	Laserjet	Q3	BK	/	AP (ex. JP)	Stop reset
227	XEROX	PCB-Q3	ALX-2226C		CT202226	Laserjet	Q3	C	/	AP (ex. JP)	Stop reset
228	XEROX	PCB-Q3	ALX-2227M		CT202227	Laserjet	Q3	M	/	AP (ex. JP)	Stop reset
229	XEROX	PCB-Q3	ALX-2228Y		CT202228	Laserjet	Q3	Y	/	AP (ex. JP)	Stop reset
230	XEROX	PCB-Q3	ALX-0670K	Xerox Workcentre 5019/5021/5022/5024	013R00670/Drum	Laserjet	Q3	BK	80K	ME	Stop reset
231	XEROX	PCB-Q3	ALX-457	Xerox WorkCentre 7220/7225/7120/7125	006R01457	Laserjet	Q3	BK	22K	EXP	Can be reset
232	XEROX	PCB-Q3	ALX-458		006R01458	Laserjet	Q3	Y	15K	EXP	Can be reset
233	XEROX	PCB-Q3	ALX-459		006R01459	Laserjet	Q3	M	15K	EXP	Can be reset
234	XEROX	PCB-Q3	ALX-460		006R01460	Laserjet	Q3	C	15K	EXP	Can be reset
235	XEROX	PCB-Q3	ALX-1160K	Xerox WorkCentre-5325/5330/5335	006R01160	Laserjet	Q3	BK	30K	ME	Stop reset
236	XEROX	PCB-Q3	ALX-0591DR		013R00591/Drum	Laserjet	Q3	BK	96K	WW	Stop reset
237	XEROX	PCB-Q3	ALX-1159		006R01159	Laserjet	Q3	BK	30K	EXP	Stop reset
238	XEROX	PCB-Q3	ALX-1159-N		006R01159-N	Laserjet	Q3	BK	30K	EXP	Stop reset

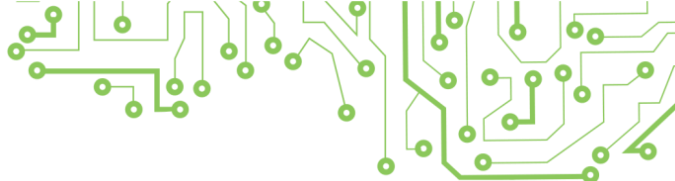 


239	XEROX	PCB-Q3	ALX-1461K	Xerox WorkCentre-7120/7125	006R01461	Laserjet	Q3	BK	22K	ME	Can be reset
240	XEROX	PCB-Q3	ALX-1464C		006R01464	Laserjet	Q3	C	15K	ME	Can be reset
241	XEROX	PCB-Q3	ALX-1463M		006R01463	Laserjet	Q3	M	15K	ME	Can be reset
242	XEROX	PCB-Q3	ALX-1462Y		006R01462	Laserjet	Q3	Y	15K	ME	Can be reset
243	XEROX	PCB-Q3	ALX-1453K		006R01453	Laserjet	Q3	BK	22K	EXP(Metered)	Stop reset
244	XEROX	PCB-Q3	ALX-1456C		006R01456	Laserjet	Q3	C	15K	EXP(Metered)	Stop reset
245	XEROX	PCB-Q3	ALX-1455M		006R01455	Laserjet	Q3	M	15K	EXP(Metered)	Stop reset
246	XEROX	PCB-Q3	ALX-1454Y		006R01454	Laserjet	Q3	Y	15K	EXP(Metered)	Stop reset
247	XEROX	PCB-Q3	ALX-0657K		013R00657	Laserjet	Q3	BK	67K	WW	Can be reset
248	XEROX	PCB-Q3	ALX-0660C		013R00660	Laserjet	Q3	C	51K	WW	Stop reset
249	XEROX	PCB-Q3	ALX-0659M		013R00659	Laserjet	Q3	M	51K	WW	Can be reset
250	XEROX	PCB-Q3	ALX-0658Y		013R00658	Laserjet	Q3	Y	51K	WW	Can be reset
251	XEROX	PCB-Q3	ALX-1453K-N		006R01453-N	Laserjet	Q3	BK	22K	EXP(Metered)	Stop reset
252	XEROX	PCB-Q4	ALX-1213K		Fuji Xerox DocuCentre-III C2200/C2201/C2205/C3300/C3305	CT201213	Laserjet	Q3	BK	26K	WW(EX JP)
253	XEROX	PCB-Q4	ALX-1214C	CT201214		Laserjet	Q3	C	15K	WW(EX JP)	Stop reset
254	XEROX	PCB-Q4	ALX-1215M	CT201215		Laserjet	Q3	M	15K	WW(EX JP)	Stop reset
255	XEROX	PCB-Q4	ALX-1216Y	CT201216		Laserjet	Q3	Y	15K	WW(EX JP)	Stop reset
256	XEROX	PCB-Q4	ALX-0748DR	CT350748/Drum		Laserjet	Q3	BKCMY Drum	91K	WW(EX JP)	Stop reset
257	XEROX	PCB-Q4	ALX-1102K	Fuji Xerox DocuCentre-III C2200/C2205/C3300/C3305	CT201102	Laserjet	Q3	BK	26K	JP	Stop reset
258	XEROX	PCB-Q4	ALX-1103C		CT201103	Laserjet	Q3	C	15K	JP	Stop reset
259	XEROX	PCB-Q4	ALX-1104M		CT201104	Laserjet	Q3	M	15K	JP	Stop reset
260	XEROX	PCB-Q4	ALX-1105Y		CT201105	Laserjet	Q3	Y	15K	JP	Stop reset
261	XEROX	PCB-Q4	ALX-0595DR		CT350595/Drum	Laserjet	Q3	BKCMY Drum	91K	JP	Stop reset
262	XEROX	PCB-Q4	ALX-1370K	Fuji Xerox DocuCentre- IV2270/2273/2275/3370/3371/ 3373/3375/4470/4475/5570/5575/ ApeosPort-IV C2270/2275/3370/3371/	CT201370	Laserjet	Q3	BK	26K	AP(EX JP)	Can be reset
263	XEROX	PCB-Q4	ALX-1371C		CT201371	Laserjet	Q3	C	15K	AP(EX JP)	Can be reset
264	XEROX	PCB-Q4	ALX-1372M		CT201372	Laserjet	Q3	M	15K	AP(EX JP)	Can be reset
265	XEROX	PCB-Q4	ALX-1373Y		CT201373	Laserjet	Q3	Y	15K	AP(EX JP)	Can be reset

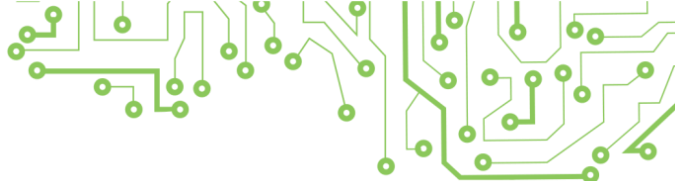 


266	XEROX	PCB-Q4	ALX-1360K	Fuji Xerox DocuCentre-IV2270/2275/3370/3371/3373/3375/4470/4475/5570/5575/	CT201360	Laserjet	Q3	BK	26K	JP	Stop reset
267	XEROX	PCB-Q4	ALX-1361C		CT201361	Laserjet	Q3	C	15K	JP	Stop reset
268	XEROX	PCB-Q4	ALX-1362M		CT201362	Laserjet	Q3	M	15K	JP	Stop reset
269	XEROX	PCB-Q4	ALX-1363Y		CT201363	Laserjet	Q3	Y	15K	JP	Stop reset
270	XEROX	PCB-Q4	ALX-0806DR	ApeosPort-IV C2270/2275/3370/3371/3373/3375/4470/4475/5570/5575	CT350806/Drum	Laserjet	Q3	BKCMY Drum	103K	AP(EX JP)	Stop reset
271	XEROX	PCB-Q4	ALX-0851DR		CT350851	Laserjet	Q3	BK	150K	AP(EX JP)	Stop reset
272	XEROX	PCB-Q4	ALX-0804DR	Fuji Xerox DocuCentre-IVC2270/3370/4470/5570/	CT350804/Drum	Laserjet	Q3	BKCMY Drum	103K	JP	Stop reset
273	XEROX	PCB-Q4	ALX-0850DR		AposPort-IV C2270/3370/4470/5570	CT350850	Laserjet	Q3	BK	150K	JP
274	XEROX	PCB-Q4	ALX-1133K	Fuji Xerox DocuPrint-C2250 Model-X/C3360 Model-X	CT201133	Laserjet	Q3	BK	15K	JP	Stop reset
275	XEROX	PCB-Q4	ALX-1134C		CT201134	Laserjet	Q3	C	12K	JP	Stop reset
276	XEROX	PCB-Q4	ALX-1135M		CT201135	Laserjet	Q3	M	12K	JP	Stop reset
277	XEROX	PCB-Q4	ALX-1136Y		CT201136	Laserjet	Q3	Y	12K	JP	Stop reset
278	XEROX	PCB-Q4	ALX-1129K	Fuji Xerox DocuPrint-C2250/C2255/C3360/Sambo e-Laser CA3250	CT201160(CT201129)	Laserjet	Q3	BK	15K	JP	Can be reset
279	XEROX	PCB-Q4	ALX-1130C		CT201161(CT201130)	Laserjet	Q3	C	12K	JP	Can be reset
280	XEROX	PCB-Q4	ALX-1131M		CT201162(CT201131)	Laserjet	Q3	M	12K	JP	Can be reset
281	XEROX	PCB-Q4	ALX-1132Y		CT201163(CT201132)	Laserjet	Q3	Y	12K	JP	Can be reset
282	XEROX	PCB-Q4	ALX-0615DR	Fuji Xerox DocuPrint-C2250/C3360	CT350615/Drum	Laserjet	Q3	BKCMY Drum	40K	JP	Stop reset
283	XEROX	PCB-Q4	ALX-0654DR	Fuji Xerox DocuPrint-C2255	CT350654/Drum	Laserjet	Q3	BKCMY Drum	40K	AP	Stop reset
284	XEROX	PCB-Q4	ALX-2054K	Fuji Xerox docuprint-C4000D	CT202054	Laserjet	Q3	BK	15K	JP	Stop reset
285	XEROX	PCB-Q4	ALX-2055C		CT202055	Laserjet	Q3	C	11k	JP	Stop reset
286	XEROX	PCB-Q4	ALX-2056M		CT202056	Laserjet	Q3	M	11k	JP	Stop reset
287	XEROX	PCB-Q4	ALX-2057Y		CT202057	Laserjet	Q3	Y	11k	JP	Stop reset
288	XEROX	PCB-Q4	ALX-0988DR		CT350988/Drum	Laserjet	Q3	BKCMY Drum	65K	JP	Stop reset

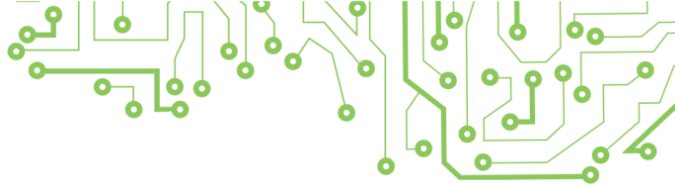 

289	XEROX	PCB-Q4	ALX-1688K	Fuji Xerox DocuPrint-C5000d	CT201688	Laserjet	Q3	BK	23K	JP	Stop reset
290	XEROX	PCB-Q4	ALX-1689C		CT201689	Laserjet	Q3	C	12K	JP	Stop reset
291	XEROX	PCB-Q4	ALX-1690M		CT201690	Laserjet	Q3	M	12K	JP	Stop reset
292	XEROX	PCB-Q4	ALX-1691Y		CT201691	Laserjet	Q3	Y	12K	JP	Stop reset
293	XEROX	PCB-Q4	ALX-0904DR		CT350904/Drum	Laserjet	Q3	BKCMY Drum	70K	JP	Stop reset
294	XEROX	PCB-Q4	ALX-1664K	Fuji Xerox DocuPrint-C5005d	CT201664	Laserjet	Q3	BK	27K	AP	Stop reset
295	XEROX	PCB-Q4	ALX-1665C		CT201665	Laserjet	Q3	C	25K	AP	Stop reset
296	XEROX	PCB-Q4	ALX-1666M		CT201666	Laserjet	Q3	M	25K	AP	Stop reset
297	XEROX	PCB-Q4	ALX-1667Y		CT201667	Laserjet	Q3	Y	25K	AP	Stop reset
298	XEROX	PCB-Q4	ALX-0894DR		CT350894/Drum	Laserjet	Q3	BKCMY Drum	70K	AP	Stop reset
299	XEROX	PCB-Q4	ALX-1697K	Xerox AltaLink C8030/C8035/C8045/C8055/C8070	006R01697	Laserjet	Q3	BK	26K	EXP	Can be reset
300	XEROX	PCB-Q4	ALX-1698C		006R01698	Laserjet	Q3	C	15k	EXP	Can be reset
301	XEROX	PCB-Q4	ALX-1699M		006R01699	Laserjet	Q3	M	15k	EXP	Can be reset
302	XEROX	PCB-Q4	ALX-1700Y		006R01700	Laserjet	Q3	Y	15k	EXP	Can be reset
303	XEROX	PCB-Q4	ALX-1697K-N		006R01697-N	Laserjet	Q3	BK	26K	EXP	Stop reset
304	XEROX	PCB-Q4	ALX-1698C-N		006R01698-N	Laserjet	Q3	C	15k	EXP	Stop reset
305	XEROX	PCB-Q4	ALX-1699M-N		006R01699-N	Laserjet	Q3	M	15k	EXP	Stop reset
306	XEROX	PCB-Q4	ALX-1700Y-N		006R01700-N	Laserjet	Q3	Y	15k	EXP	Stop reset
307	XEROX	PCB-Q4	ALX-1439	Xerox Phaser 7500N/DN	106R01439	Laserjet	Q3	BK	19.8K	EXP	Can be reset
308	XEROX	PCB-Q4	ALX-1436		106R01436	Laserjet	Q3	C	17.8K	EXP	Can be reset
309	XEROX	PCB-Q4	ALX-1437		106R01437	Laserjet	Q3	M	17.8K	EXP	Can be reset
310	XEROX	PCB-Q4	ALX-1438		106R01438	Laserjet	Q3	Y	17.8K	EXP	Can be reset
311	XEROX	PCB-Q4	ALX-1439-N		106R01439-N	Laserjet	Q3	BK	19.8K	EXP	Can be reset
312	XEROX	PCB-Q4	ALX-1436-N		106R01436-N	Laserjet	Q3	C	17.8K	EXP	Can be reset
313	XEROX	PCB-Q4	ALX-1437-N		106R01437-N	Laserjet	Q3	M	17.8K	EXP	Can be reset
314	XEROX	PCB-Q4	ALX-1438-N		106R01438-N	Laserjet	Q3	Y	17.8K	EXP	Can be reset
315	XEROX	PCB-Q4	ALX-1433C		106R01433	Laserjet	Q3	C	9.6K	EXP	Stop reset
316	XEROX	PCB-Q4	ALX-1434M		106R01434	Laserjet	Q3	M	9.6K	EXP	Stop reset
317	XEROX	PCB-Q4	ALX-1435Y		106R01435	Laserjet	Q3	Y	9.6K	EXP	Stop reset

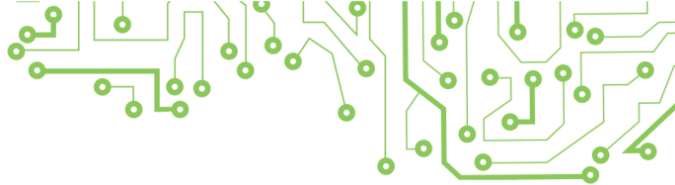 

318	XEROX	PCB-Q4	ALX-0861DR	Xerox Phaser 7800N/DN	108R00861/Drum	Laserjet	Q3	BKCMY Drum	80K	WW	Stop reset
319	XEROX	PCB-Q4	ALX-1433C-N		106R01433-N	Laserjet	Q3	C	9.6K	EXP	Stop reset
320	XEROX	PCB-Q4	ALX-1434M-N		106R01434-N	Laserjet	Q3	M	9.6K	EXP	Can be reset
321	XEROX	PCB-Q4	ALX-1435Y-N		106R01435-N	Laserjet	Q3	Y	9.6K	EXP	Can be reset
322	XEROX	PCB-Q4	ALX-1569		106R01569	Laserjet	Q3	BK	24K	EXP	Can be reset
323	XEROX	PCB-Q4	ALX-1566		106R01566	Laserjet	Q3	C	17.2K	EXP	Can be reset
324	XEROX	PCB-Q4	ALX-1567		106R01567	Laserjet	Q3	M	17.2K	EXP	Can be reset
325	XEROX	PCB-Q4	ALX-1568		106R01568	Laserjet	Q3	Y	17.2K	EXP	Can be reset
326	XEROX	PCB-Q4	ALX-1563		106R01563	Laserjet	Q3	C	6K	EXP	Can be reset
327	XEROX	PCB-Q4	ALX-1564		106R01564	Laserjet	Q3	M	6K	EXP	Can be reset
328	XEROX	PCB-Q4	ALX-1565		106R01565	Laserjet	Q3	Y	6K	EXP	Can be reset
329	XEROX	PCB-Q4	ALX-1569-N		106R01569-N	Laserjet	Q3	BK	24K	EXP	Can be reset
330	XEROX	PCB-Q4	ALX-1566-N		106R01566-N	Laserjet	Q3	C	17.2K	EXP	Can be reset
331	XEROX	PCB-Q4	ALX-1567-N		106R01567-N	Laserjet	Q3	M	17.2K	EXP	Can be reset
332	XEROX	PCB-Q4	ALX-1568-N		106R01568-N	Laserjet	Q3	Y	17.2K	EXP	Can be reset
333	XEROX	PCB-Q4	ALX-1563-N		106R01563-N	Laserjet	Q3	C	6K	EXP	Can be reset
334	XEROX	PCB-Q4	ALX-1564-N		106R01564-N	Laserjet	Q3	M	6K	EXP	Can be reset
335	XEROX	PCB-Q4	ALX-1565-N		106R01565-N	Laserjet	Q3	Y	6K	EXP	Can be reset
336	XEROX	PCB-Q4	ALX-1582DR		106R01582/Drum	Laserjet	Q3	BKCMY Drum	145K	WW	Can be reset
337	XEROX	PCB-Q4	ALX-1582DR-N		106R01582-N/Drum	Laserjet	Q3	BKCMY Drum	145K	WW	Can be reset
338	XEROX	PCB-Q4	ALX-1395	Xerox WorkCentre 7425/7428/7435	006R01395	Laserjet	Q3	BK	26K	EXP	Stop reset
339	XEROX	PCB-Q4	ALX-1398		006R01398	Laserjet	Q3	C	15K	EXP	Stop reset
340	XEROX	PCB-Q4	ALX-1397		006R01397	Laserjet	Q3	M	15K	EXP	Stop reset
341	XEROX	PCB-Q4	ALX-1396		006R01396	Laserjet	Q3	Y	15K	EXP	Stop reset
342	XEROX	PCB-Q4	ALX-1399		006R01399	Laserjet	Q3	BK	25K	ME	Stop reset
343	XEROX	PCB-Q4	ALX-1400		006R01400	Laserjet	Q3	Y	15K	ME	Stop reset
344	XEROX	PCB-Q4	ALX-1401		006R01401	Laserjet	Q3	M	15K	ME	Stop reset
345	XEROX	PCB-Q4	ALX-1402		006R01402	Laserjet	Q3	C	15K	ME	Stop reset

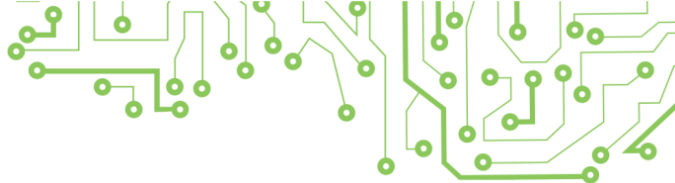 

346	XEROX	PCB-Q4	ALX-1391K	Xerox WorkCentre 7425/7428/7435	006R01391	Laserjet	Q3	BK	26K	EXP(Metered)	Stop reset
347	XEROX	PCB-Q4	ALX-1394C		006R01394	Laserjet	Q3	C	15K	EXP(Metered)	Stop reset
348	XEROX	PCB-Q4	ALX-1393M		006R01393	Laserjet	Q3	M	15K	EXP(Metered)	Stop reset
349	XEROX	PCB-Q4	ALX-1392Y		006R01392	Laserjet	Q3	Y	15K	EXP(Metered)	Stop reset
350	XEROX	PCB-Q4	ALX-0647DR		013R00647/Drum	Laserjet	Q3	BKCMY Drum	61K	WW	Stop reset
351	XEROX	PCB-Q4	ALX-513	Xerox Workcentre 7525/7530/7535/7545/ 7556/7830/7855/7970/7835i/7845i	006R01513	Laserjet	Q3	BK	26K	EXP	Can be reset
352	XEROX	PCB-Q4	ALX-514		006R01514	Laserjet	Q3	Y	15K	EXP	Can be reset
353	XEROX	PCB-Q4	ALX-515		006R01515	Laserjet	Q3	M	15K	EXP	Stop reset
354	XEROX	PCB-Q4	ALX-516		006R01516	Laserjet	Q3	C	15K	EXP	Can be reset
355	XEROX	PCB-Q4	ALX-517K		006R01517	Laserjet	Q3	BK	26K	ME	Stop reset
356	XEROX	PCB-Q4	ALX-520C		006R01520	Laserjet	Q3	C	15K	ME	Stop reset
357	XEROX	PCB-Q4	ALX-519M		006R01519	Laserjet	Q3	M	15K	ME	Stop reset
358	XEROX	PCB-Q4	ALX-518Y		006R01518	Laserjet	Q3	Y	15K	ME	Can be reset
359	XEROX	PCB-Q4	ALX-0662DR		013R00662/Drum	Laserjet	Q3	BKCMY Drum	125K	WW	Can be reset
360	XEROX	PCB-Q4	ALX-509K		006R01509	Laserjet	Q3	BK	26K	ME(Metered)	Stop reset
361	XEROX	PCB-Q4	ALX-512C		006R01512	Laserjet	Q3	C	15K	ME(Metered)	Stop reset
362	XEROX	PCB-Q4	ALX-511M		006R01511	Laserjet	Q3	M	15K	ME(Metered)	Can be reset
363	XEROX	PCB-Q4	ALX-510Y		006R01510	Laserjet	Q3	Y	15K	ME(Metered)	Can be reset