Product Update Notification

Unismart 3 DBBASE V2.33

Date: **September 2021**

1. Unismart 3 Device

| Item	Before	After
APP	V39.0	V39.0
DBBASE	V2.28	V2.33
BR3	V2.2	V2.8
BROTHER	V0.15	V0.19

2. Uni-3 New JIG (N/A)

3. Update Instruction

① Update JIG BR3 and optimized the rest function of Brother III series.

4. Uni-3 Newly-added Blank Chip List (N/A)

5. Uni-3 Updated Model List

| Brand	PCB Code	OEM Code	JIG	Yield	Color	Region	For Use in Printers
BROTHER	PCB-BR3	LC3017BK	BR3	——	BK	USA	Brother MFC-J5330DW/J6530DW/ J6930DW/J6730DW
BROTHER	PCB-BR3	LC3017C	BR3		C		
BROTHER	PCB-BR3	LC3017M	BR3		M		
BROTHER	PCB-BR3	LC3017Y	BR3		Y		
BROTHER	PCB-BR3	LC3019BK	BR3		BK		
BROTHER	PCB-BR3	LC3019C	BR3		C		
BROTHER	PCB-BR3	LC3019M	BR3		M		
BROTHER	PCB-BR3	LC3019Y	BR3		Y		
BROTHER	PCB-BR3	LC3029BK	BR3	——	BK	USA	Brother MFC-J5830DW/J5830DW XL/ J6535DW/J6535DW XL/ J5930DW/J6935DW
BROTHER	PCB-BR3	LC3029C	BR3		C		
BROTHER	PCB-BR3	LC3029M	BR3		M		
BROTHER	PCB-BR3	LC3029Y	BR3		Y		
BROTHER	PCB-BR3	LC3117BK	BR3	——	BK	JPN	Brother MFC-J6980CDW/J6580CDW
BROTHER	PCB-BR3	LC3117C	BR3		C		
BROTHER	PCB-BR3	LC3117M	BR3		M		
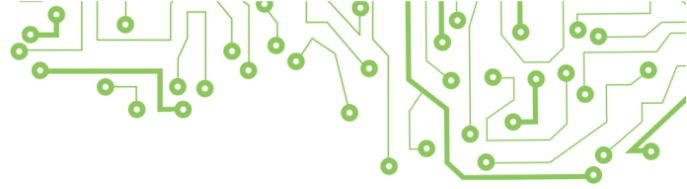
BROTHER	PCB-BR3	LC3117Y	BR3		Y	
BROTHER	PCB-BR3	LC3119BK	BR3		BK	
BROTHER	PCB-BR3	LC3119C	BR3		C	
BROTHER	PCB-BR3	LC3119M	BR3		M	
BROTHER	PCB-BR3	LC3119Y	BR3		Y	
BROTHER	PCB-BR3	LC3129BK	BR3	——	BK	JPN	Brother MFC-J6995CDW
BROTHER	PCB-BR3	LC3129C	BR3		C	
BROTHER	PCB-BR3	LC3129M	BR3		M	
BROTHER	PCB-BR3	LC3129Y	BR3		Y	
BROTHER	PCB-BR3	LC3213BK	BR3	——	BK	EUR	Brother MFC-J890DW/J895DW/ DCP-J772DW/J774DW
BROTHER	PCB-BR3	LC3213C	BR3		C	
BROTHER	PCB-BR3	LC3213M	BR3		M	
BROTHER	PCB-BR3	LC3213Y	BR3		Y	
BROTHER	PCB-BR3	LC3217BK	BR3	——	BK	EUR	Brother MFC-J5330DW/J5335DW/ J5730DW/J5930DW/J6530DW/ J6930DW/J6935DW
BROTHER	PCB-BR3	LC3217C	BR3		C	
BROTHER	PCB-BR3	LC3217M	BR3		M	
BROTHER	PCB-BR3	LC3217Y	BR3		Y	
BROTHER	PCB-BR3	LC3219BK	BR3		BK	
BROTHER	PCB-BR3	LC3219C	BR3		C	
BROTHER	PCB-BR3	LC3219M	BR3		M	
BROTHER	PCB-BR3	LC3219Y	BR3		Y	
BROTHER	PCB-BR3	LC3317BK	BR3	——	BK	AUS	Brother MFC-J5330DW/J5730DW/ J6530DW/J6930DW/J6730DW
BROTHER	PCB-BR3	LC3317C	BR3		C	
BROTHER	PCB-BR3	LC3317M	BR3		M	
BROTHER	PCB-BR3	LC3317Y	BR3		Y	
BROTHER	PCB-BR3	LC3319BK	BR3		BK	
BROTHER	PCB-BR3	LC3319C	BR3		C	
BROTHER	PCB-BR3	LC3319M	BR3		M	
BROTHER	PCB-BR3	LC3319Y	BR3		Y	
BROTHER	PCB-BR3	LC3329BK	BR3	——	BK	AUS	Brother MFC-J5930DW/J6935DW
BROTHER	PCB-BR3	LC3329C	BR3		C	
BROTHER	PCB-BR3	LC3329M	BR3		M	
BROTHER	PCB-BR3	LC3329Y	BR3		Y	
BROTHER	PCB-BR3	LC3617BK	BR3	——	BK	AP	Brother MFC-J2330DW/ J2730DW/J3530DW/J3930DW
BROTHER	PCB-BR3	LC3617C	BR3		C	
BROTHER	PCB-BR3	LC3617M	BR3		M	
BROTHER	PCB-BR3	LC3617Y	BR3		Y	
BROTHER	PCB-BR3	LC3619BK	BR3		BK	
BROTHER	PCB-BR3	LC3619C	BR3		C	
BROTHER	PCB-BR3	LC3619M	BR3		M	
BROTHER	PCB-BR3	LC3619Y	BR3		Y	

BROTHER	PCB-BR3	LC3719BK	BR3	——	BK	ME	Brother MFC-J2330DW/J3930DW
BROTHER	PCB-BR3	LC3719C	BR3		C		
BROTHER	PCB-BR3	LC3719M	BR3		M		
BROTHER	PCB-BR3	LC3719Y	BR3		Y		
BROTHER	PCB-BR3	LC3011BK	BR3	——	BK	USA	Brother MFC-J491DW/ J497DW/J690DW/J895DW
BROTHER	PCB-BR3	LC3011C	BR3		C		
BROTHER	PCB-BR3	LC3011M	BR3		M		
BROTHER	PCB-BR3	LC3011Y	BR3		Y		
BROTHER	PCB-BR3	LC3013BK	BR3		BK		
BROTHER	PCB-BR3	LC3013C	BR3		C		
BROTHER	PCB-BR3	LC3013M	BR3		M		
BROTHER	PCB-BR3	LC3013Y	BR3		Y		
BROTHER	PCB-BR3	LC3111BK	BR3	——	BK	JPN	Brother DCP-J972N/J973N-W/B/ J978N572N/J577N/J982N-B/W/- J582N/MFC-J893N/J898N/J998DN/ DWN/J738DN/J903N
BROTHER	PCB-BR3	LC3111C	BR3		C		
BROTHER	PCB-BR3	LC3111M	BR3		M		
BROTHER	PCB-BR3	LC3111Y	BR3		Y		
BROTHER	PCB-BR3	LC3211BK	BR3	——	BK	EUR	Brother MFC-J890DW/J895DW/ DCP-J772DW/J774DW
BROTHER	PCB-BR3	LC3211C	BR3		C		
BROTHER	PCB-BR3	LC3211M	BR3		M		
BROTHER	PCB-BR3	LC3211Y	BR3		Y		
BROTHER	PCB-BR3	LC3311BK	BR3	——	BK	AUS	Brother DCP-J772DW/MFC- J491DW/J890DW
BROTHER	PCB-BR3	LC3311C	BR3		C		
BROTHER	PCB-BR3	LC3311M	BR3		M		
BROTHER	PCB-BR3	LC3311Y	BR3		Y		
BROTHER	PCB-BR3	LC3313BK	BR3		BK		
BROTHER	PCB-BR3	LC3313C	BR3		C		
BROTHER	PCB-BR3	LC3313M	BR3		M		
BROTHER	PCB-BR3	LC3313Y	BR3		Y		
BROTHER	PCB-BR3	LC3511BK	BR3	——	BK	AP	Brother MFC-J690DW/J890DW
BROTHER	PCB-BR3	LC3511C	BR3		C		
BROTHER	PCB-BR3	LC3511M	BR3		M		
BROTHER	PCB-BR3	LC3511Y	BR3		Y		
BROTHER	PCB-BR3	LC3513BK	BR3		BK		
BROTHER	PCB-BR3	LC3513C	BR3		C		
BROTHER	PCB-BR3	LC3513M	BR3		M		
BROTHER	PCB-BR3	LC3513Y	BR3		Y		
BROTHER	PCB-BR3	LC3717BK	BR3	——	BK	ME	Brother MFC-J2330DW/J3930DW
BROTHER	PCB-BR3	LC3717C	BR3		C		
BROTHER	PCB-BR3	LC3717M	BR3		M		
BROTHER	PCB-BR3	LC3717Y	BR3		Y		
BROTHER	PCB-BR3	LC3017BK-N	BR3	——	BK	USA	Brother MFC-J5330DW/J6530DW/
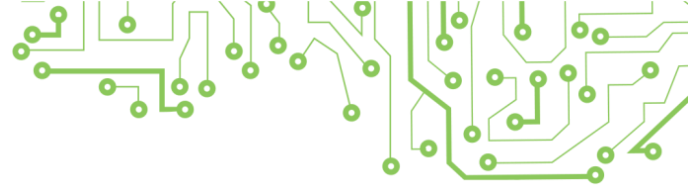
|							
BROTHER	PCB-BR3	LC3017C-N	BR3		C		J6930DW/J6730DW
BROTHER	PCB-BR3	LC3017M-N	BR3		M		
BROTHER	PCB-BR3	LC3017Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3019BK-N	BR3		BK		
BROTHER	PCB-BR3	LC3019C-N	BR3		C		
BROTHER	PCB-BR3	LC3019M-N	BR3		M		
BROTHER	PCB-BR3	LC3019Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3029BK-N	BR3	——	BK	USA	Brother MFC-J5830DW/J5830DW XL/ J6535DW/J6535DW XL/ J5930DW/J6935DW
BROTHER	PCB-BR3	LC3029C-N	BR3		C		
BROTHER	PCB-BR3	LC3029M-N	BR3		M		
BROTHER	PCB-BR3	LC3029Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3117BK-N	BR3	——	BK	JPN	Brother MFC-J6980CDW/J6580CDW
BROTHER	PCB-BR3	LC3117C-N	BR3		C		
BROTHER	PCB-BR3	LC3117M-N	BR3		M		
BROTHER	PCB-BR3	LC3117Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3119BK-N	BR3		BK		
BROTHER	PCB-BR3	LC3119C-N	BR3		C		
BROTHER	PCB-BR3	LC3119M-N	BR3		M		
BROTHER	PCB-BR3	LC3119Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3129BK-N	BR3	——	BK	JPN	Brother MFC-J6995CDW
BROTHER	PCB-BR3	LC3129C-N	BR3		C		
BROTHER	PCB-BR3	LC3129M-N	BR3		M		
BROTHER	PCB-BR3	LC3129Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3213BK-N	BR3	——	BK	EUR	Brother MFC-J890DW/J895DW/ DCP-J772DW/J774DW
BROTHER	PCB-BR3	LC3213C-N	BR3		C		
BROTHER	PCB-BR3	LC3213M-N	BR3		M		
BROTHER	PCB-BR3	LC3213Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3217BK-N	BR3	——	BK	EUR	Brother MFC-J5330DW/J5335DW/ J5730DW/J5930DW/J6530DW/ J6930DW/J6935DW
BROTHER	PCB-BR3	LC3217C-N	BR3		C		
BROTHER	PCB-BR3	LC3217M-N	BR3		M		
BROTHER	PCB-BR3	LC3217Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3219BK-N	BR3		BK		
BROTHER	PCB-BR3	LC3219C-N	BR3		C		
BROTHER	PCB-BR3	LC3219M-N	BR3		M		
BROTHER	PCB-BR3	LC3219Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3317BK-N	BR3	——	BK	AUS	Brother MFC-J5330DW/J5730DW/ J6530DW/J6930DW/J6730DW
BROTHER	PCB-BR3	LC3317C-N	BR3		C		
BROTHER	PCB-BR3	LC3317M-N	BR3		M		
BROTHER	PCB-BR3	LC3317Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3319BK-N	BR3		BK		
BROTHER	PCB-BR3	LC3319C-N	BR3		C		
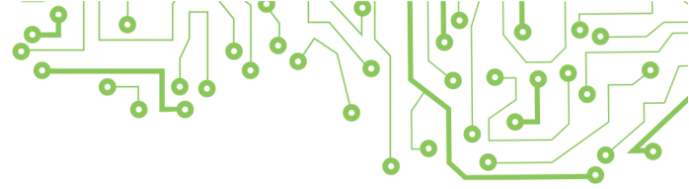
BROTHER	PCB-BR3	LC3319M-N	BR3		M		
BROTHER	PCB-BR3	LC3319Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3329BK-N	BR3	——	BK	AUS	Brother MFC-J5930DW/J6935DW
BROTHER	PCB-BR3	LC3329C-N	BR3		C		
BROTHER	PCB-BR3	LC3329M-N	BR3		M		
BROTHER	PCB-BR3	LC3329Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3617BK-N	BR3	——	BK	AP	Brother MFC-J2330DW/J2730DW/ J3530DW/J3930DW
BROTHER	PCB-BR3	LC3617C-N	BR3		C		
BROTHER	PCB-BR3	LC3617M-N	BR3		M		
BROTHER	PCB-BR3	LC3617Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3619BK-N	BR3		BK		
BROTHER	PCB-BR3	LC3619C-N	BR3		C		
BROTHER	PCB-BR3	LC3619M-N	BR3		M		
BROTHER	PCB-BR3	LC3619Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3719BK-N	BR3	——	BK	ME	Brother MFC-J2330DW/J3930DW
BROTHER	PCB-BR3	LC3719C-N	BR3		C		
BROTHER	PCB-BR3	LC3719M-N	BR3		M		
BROTHER	PCB-BR3	LC3719Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3011BK-N	BR3	——	BK	USA	Brother MFC-J491DW/J497DW/ J690DW/J895DW
BROTHER	PCB-BR3	LC3011C-N	BR3		C		
BROTHER	PCB-BR3	LC3011M-N	BR3		M		
BROTHER	PCB-BR3	LC3011Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3013BK-N	BR3		BK		
BROTHER	PCB-BR3	LC3013C-N	BR3		C		
BROTHER	PCB-BR3	LC3013M-N	BR3		M		
BROTHER	PCB-BR3	LC3013Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3111BK-N	BR3	——	BK	JPN	Brother DCP-J972N/DCP-J973N-W/B/J978N572N/J577N/J982N-B/W/-J582N/MFC-J893N/J898N/ J998DN/DWN/J738DN/J903N
BROTHER	PCB-BR3	LC3111C-N	BR3		C		
BROTHER	PCB-BR3	LC3111M-N	BR3		M		
BROTHER	PCB-BR3	LC3111Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3211BK-N	BR3	——	BK	EUR	Brother MFC-J890DW/J895DW/ DCP-J772DW/J774DW
BROTHER	PCB-BR3	LC3211C-N	BR3		C		
BROTHER	PCB-BR3	LC3211M-N	BR3		M		
BROTHER	PCB-BR3	LC3211Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3311BK-N	BR3	——	BK	AUS	Brother DCP-J772DW/MFC-J491DW/J890DW
BROTHER	PCB-BR3	LC3311C-N	BR3		C		
BROTHER	PCB-BR3	LC3311M-N	BR3		M		
BROTHER	PCB-BR3	LC3311Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3313BK-N	BR3		BK		
BROTHER	PCB-BR3	LC3313C-N	BR3		C		
BROTHER	PCB-BR3	LC3313M-N	BR3		M		

| BROTHER	PCB-BR3	LC3313Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3511BK-N	BR3		BK		
BROTHER	PCB-BR3	LC3511C-N	BR3		C		
BROTHER	PCB-BR3	LC3511M-N	BR3		M		
BROTHER	PCB-BR3	LC3511Y-N	BR3	——	Y	AP	Brother MFC-J690DW/J890DW
BROTHER	PCB-BR3	LC3513BK-N	BR3		BK		
BROTHER	PCB-BR3	LC3513C-N	BR3		C		
BROTHER	PCB-BR3	LC3513M-N	BR3		M		
BROTHER	PCB-BR3	LC3513Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3717BK-N	BR3		BK		
BROTHER	PCB-BR3	LC3717C-N	BR3	——	C	ME	Brother MFC-J2330DW/J3930DW
BROTHER	PCB-BR3	LC3717M-N	BR3		M		
BROTHER	PCB-BR3	LC3717Y-N	BR3		Y		
BROTHER	PCB-BR3	LC3017BK-S	BR3		BK		
BROTHER	PCB-BR3	LC3017C-S	BR3	Start	C	USA	Brother MFC-J5330DW/J6530DW/ J6930DW/J6730DW
BROTHER	PCB-BR3	LC3017M-S	BR3		M		
BROTHER	PCB-BR3	LC3017Y-S	BR3		Y		
BROTHER	PCB-BR3	LC3029BK-S	BR3		BK		
BROTHER	PCB-BR3	LC3029C-S	BR3	Start	C	USA	Brother MFC-J5830DW/J5830DW XL/ J6535DW/J6535DW XL/ J5930DW/J6935DW
BROTHER	PCB-BR3	LC3029M-S	BR3		M		
BROTHER	PCB-BR3	LC3029Y-S	BR3		Y		
BROTHER	PCB-BR3	LC3117BK-S	BR3		BK		
BROTHER	PCB-BR3	LC3117C-S	BR3	Start	C	JPN	Brother MFC-J6980CDW/J6580CDW
BROTHER	PCB-BR3	LC3117M-S	BR3		M		
BROTHER	PCB-BR3	LC3117Y-S	BR3		Y		
BROTHER	PCB-BR3	LC3129BK-S	BR3		BK		
BROTHER	PCB-BR3	LC3129C-S	BR3	Start	C	JPN	Brother MFC-J6995CDW
BROTHER	PCB-BR3	LC3129M-S	BR3		M		
BROTHER	PCB-BR3	LC3129Y-S	BR3		Y		
BROTHER	PCB-BR3	LC3217BK-S	BR3		BK		
BROTHER	PCB-BR3	LC3217C-S	BR3		C		
BROTHER	PCB-BR3	LC3217M-S	BR3		M		
BROTHER	PCB-BR3	LC3217Y-S	BR3	Start	Y	EUR	Brother MFC-J5330DW/J5335DW/ J5730DW/J5930DW/J6530DW/ J6930DW/J6935DW
BROTHER	PCB-BR3	LC3219BK-S	BR3		BK		
BROTHER	PCB-BR3	LC3219C-S	BR3		C		
BROTHER	PCB-BR3	LC3219M-S	BR3		M		
BROTHER	PCB-BR3	LC3219Y-S	BR3		Y		
BROTHER	PCB-BR3	LC3011BK-S	BR3		BK		
BROTHER	PCB-BR3	LC3011C-S	BR3	Start	C	USA	Brother MFC-J491DW/J497DW/ J690DW/J895DW
BROTHER	PCB-BR3	LC3011M-S	BR3		M		
BROTHER	PCB-BR3	LC3011Y-S	BR3		Y		

BROTHER	PCB-BR3	LC3111BK-S	BR3	Start	BK	JPN	Brother DCP-J972N/DCP-J973N-W/B/J978N572N/J577N/J982N-B/W/-J582N/MFC-J893N/J898N/J998DN/DWN/J738DN/J903N
BROTHER	PCB-BR3	LC3111C-S	BR3		C		
BROTHER	PCB-BR3	LC3111M-S	BR3		M		
BROTHER	PCB-BR3	LC3111Y-S	BR3		Y		
BROTHER	PCB-BR3	LC3211BK-S	BR3	Start	BK	EUR	Brother MFC-J890DW/J895DW/DCP-J772DW/J774DW
BROTHER	PCB-BR3	LC3211C-S	BR3		C		
BROTHER	PCB-BR3	LC3211M-S	BR3		M		
BROTHER	PCB-BR3	LC3211Y-S	BR3		Y		
BROTHER	PCB-BR3	LC3219BK-S	BR3	Start	BK	EUR	Brother MFC-J5330DW/J5335DW/J5730DW/J5930DW/J6530DW/J6930DW/J6935DW
BROTHER	PCB-BR3	LC3219C-S	BR3		C		
BROTHER	PCB-BR3	LC3219M-S	BR3		M		
BROTHER	PCB-BR3	LC3219Y-S	BR3		Y		
BROTHER	PCB-BR3	LC3311BK-S	BR3	Start	BK	AUS	Brother DCP-J772DW/MFC-J491DW/J890DW
BROTHER	PCB-BR3	LC3311C-S	BR3		C		
BROTHER	PCB-BR3	LC3311M-S	BR3		M		
BROTHER	PCB-BR3	LC3311Y-S	BR3		Y		
BROTHER	PCB-BR3	LC3511BK-S	BR3	Start	BK	AP	Brother MFC-J690DW/J890DW
BROTHER	PCB-BR3	LC3511C-S	BR3		C		
BROTHER	PCB-BR3	LC3511M-S	BR3		M		
BROTHER	PCB-BR3	LC3511Y-S	BR3		Y		
BROTHER	PCB-BR3	LC3717BK-S	BR3	Start	BK	ME	Brother MFC-J2330DW/J3930DW
BROTHER	PCB-BR3	LC3717C-S	BR3		C		
BROTHER	PCB-BR3	LC3717M-S	BR3		M		
BROTHER	PCB-BR3	LC3717Y-S	BR3		Y		
BROTHER	PCB-BR3	LC3017BK-N-S	BR3	Start	BK	USA	Brother MFC-J5330DW/J6530DW/J6930DW/J6730DW
BROTHER	PCB-BR3	LC3017C-N-S	BR3		C		
BROTHER	PCB-BR3	LC3017M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3017Y-N-S	BR3		Y		
BROTHER	PCB-BR3	LC3029BK-N-S	BR3	Start	BK	USA	Brother MFC-J5830DW/J5830DW XL/J6535DW/J6535DW XL/J5930DW/J6935DW
BROTHER	PCB-BR3	LC3029C-N-S	BR3		C		
BROTHER	PCB-BR3	LC3029M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3029Y-N-S	BR3		Y		
BROTHER	PCB-BR3	LC3117BK-N-S	BR3	Start	BK	JPN	Brother MFC-J6980CDW/J6580CDW
BROTHER	PCB-BR3	LC3117C-N-S	BR3		C		
BROTHER	PCB-BR3	LC3117M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3117Y-N-S	BR3		Y		
BROTHER	PCB-BR3	LC3129BK-N-S	BR3	Start	BK	JPN	Brother MFC-J6995CDW
BROTHER	PCB-BR3	LC3129C-N-S	BR3		C		
BROTHER	PCB-BR3	LC3129M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3129Y-N-S	BR3		Y		
BROTHER	PCB-BR3	LC3217BK-N-S	BR3	Start	BK	EUR	Brother MFC-J5330DW/J5335DW/
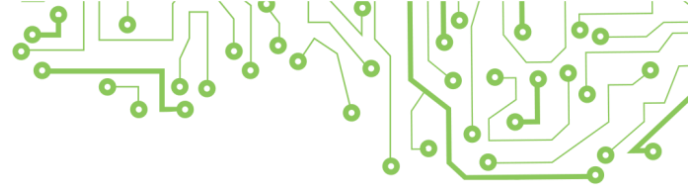
BROTHER	PCB-BR3	LC3217C-N-S	BR3		C		J5730DW/J5930DW/J6530DW/ J6930DW/J6935DW
BROTHER	PCB-BR3	LC3217M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3217Y-N-S	BR3		Y		
BROTHER	PCB-BR3	LC3219BK-N-S	BR3		BK		
BROTHER	PCB-BR3	LC3219C-N-S	BR3		C		
BROTHER	PCB-BR3	LC3219M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3219Y-N-S	BR3		Y		
BROTHER	PCB-BR3	LC3011BK-N-S	BR3	Start	BK	USA	Brother MFC-J491DW/J497DW/ J690DW/J895DW
BROTHER	PCB-BR3	LC3011C-N-S	BR3		C		
BROTHER	PCB-BR3	LC3011M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3011Y-N-S	BR3		Y		
BROTHER	PCB-BR3	LC3111BK-N-S	BR3	Start	BK	JPN	Brother DCP-J972N/DCP-J973N-W/B/J978N572N/J577N/J982N-B/W/-J582N/MFC-J893N/J898N/ J998DN/DWN/J738DN/J903N
BROTHER	PCB-BR3	LC3111C-N-S	BR3		C		
BROTHER	PCB-BR3	LC3111M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3111Y-N-S	BR3		Y		
BROTHER	PCB-BR3	LC3211BK-N-S	BR3	Start	BK	EUR	Brother MFC-J890DW/J895DW/ DCP-J772DW/J774DW
BROTHER	PCB-BR3	LC3211C-N-S	BR3		C		
BROTHER	PCB-BR3	LC3211M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3211Y-N-S	BR3		Y		
BROTHER	PCB-BR3	LC3219BK-N-S	BR3	Start	BK	EUR	Brother MFC-J5330DW/J5335DW/ J5730DW/J5930DW/J6530DW/ J6930DW/J6935DW
BROTHER	PCB-BR3	LC3219C-N-S	BR3		C		
BROTHER	PCB-BR3	LC3219M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3219Y-N-S	BR3		Y		
BROTHER	PCB-BR3	LC3311BK-N-S	BR3	Start	BK	AUS	Brother DCP-J772DW/MFC-J491DW/J890DW
BROTHER	PCB-BR3	LC3311C-N-S	BR3		C		
BROTHER	PCB-BR3	LC3311M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3311Y-N-S	BR3		Y		
BROTHER	PCB-BR3	LC3511BK-N-S	BR3	Start	BK	AP	Brother MFC-J690DW/J890DW
BROTHER	PCB-BR3	LC3511C-N-S	BR3		C		
BROTHER	PCB-BR3	LC3511M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3511Y-N-S	BR3		Y		
BROTHER	PCB-BR3	LC3717BK-N-S	BR3	Start	BK	ME	Brother MFC-J2330DW/J3930DW
BROTHER	PCB-BR3	LC3717C-N-S	BR3		C		
BROTHER	PCB-BR3	LC3717M-N-S	BR3		M		
BROTHER	PCB-BR3	LC3717Y-N-S	BR3		Y		

6. Operations to Confirm the Updated Version
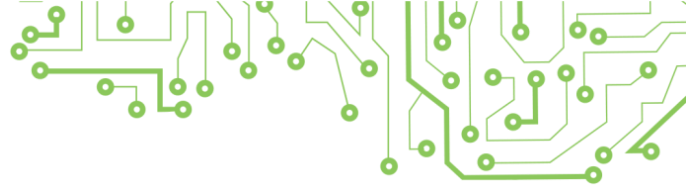
When the device has been updated, please enter the Settings-Version interface to confirm the updated version by below steps (find the appendix in Unismart 3 Device for reference)
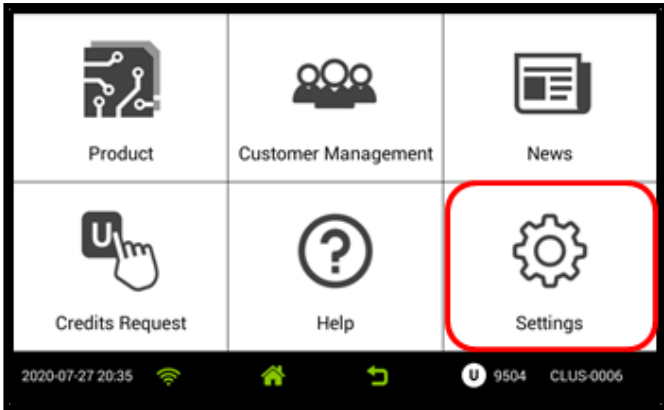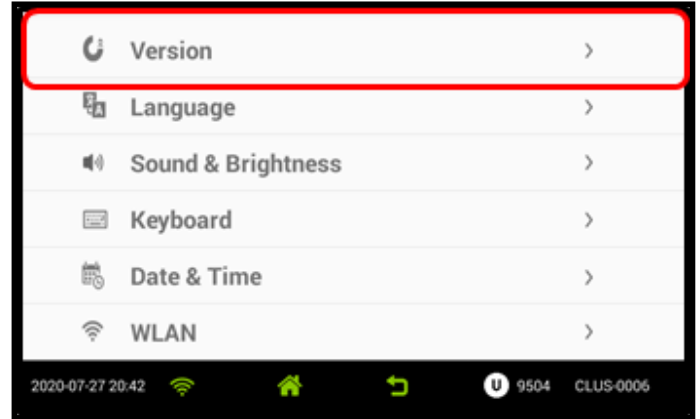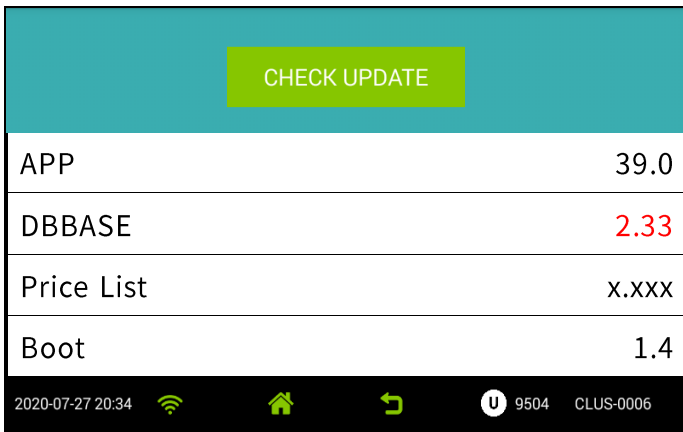

Figure 1

Figure 2

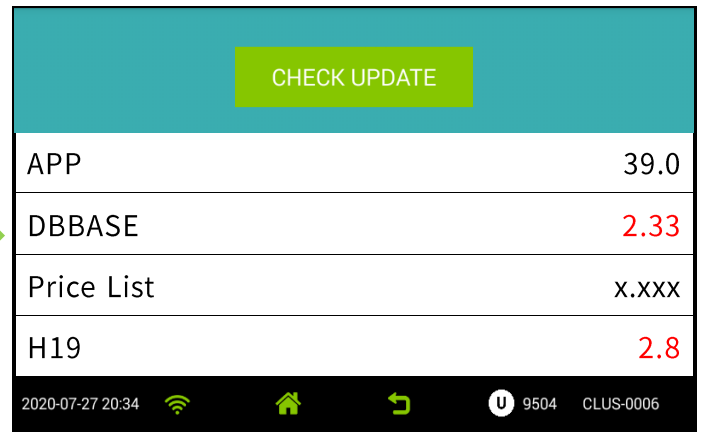Figure 3 Versions without JIG connecting

Figure 4 Versions with JIG connecting
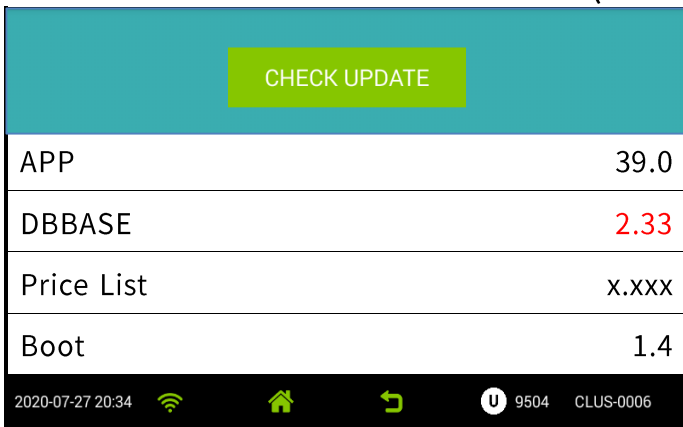
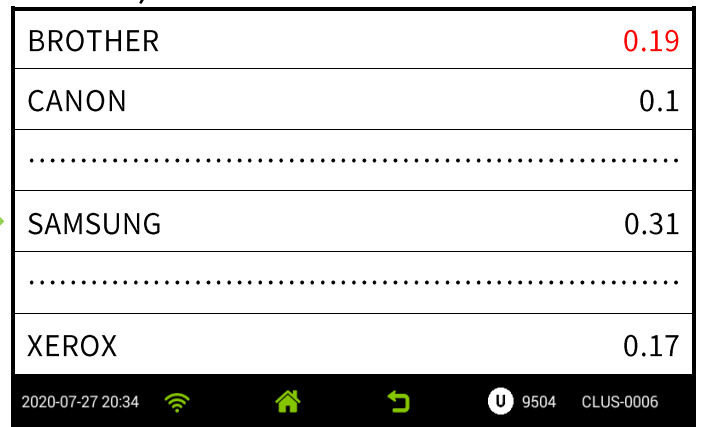Version list for the device & JIG (click DBBASE to check)

Figure 5

Figure 6

| SN-XEROX-7100	0.04

Hardware #1	12.2
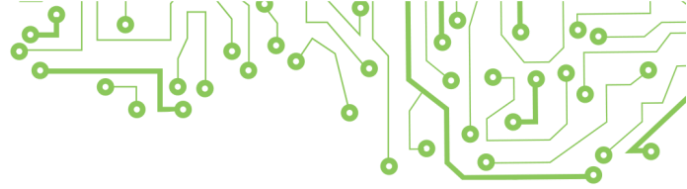
TALLY	0.03
TOSHIBA	0.03
UTAX	0.03
VersionInfo	2.33
XEROX	0.17

Figure 7

....	
BR3	2.8
C	1
....	
ST2	4.7

Figure 8